


Warranty information included

## 1007372080 LOW COST Manual Bidet

Thank you for purchasing the BIDET. Please read through the manual carefully for appropriate use of the product.

After you read through the manual, keep it at a proper place for further reference.

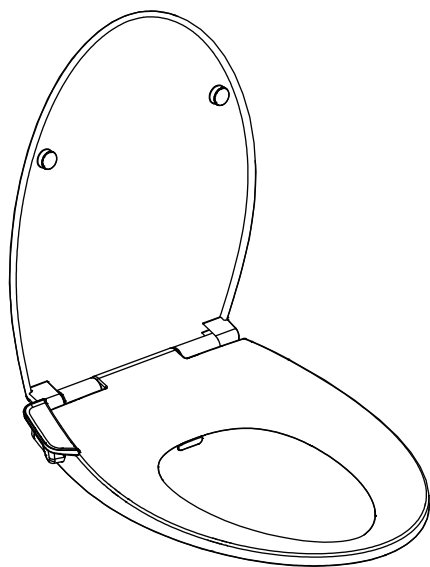

1007372080

### 1 Names of Parts ----- 1-2

### 2 Installation ----- 3-6

Pre-installation  
Installation Procedures  
Connecting water hose

### 3 Operation ----- 7

### 4 Care and Cleaning ----- 8

### 5 Product maintenance ----- 9


### 6 Self Diagnosis and Specifications ----- 10

Self Diagnosis and Trouble Shooting  
Specifications


### Warranty

# 1 Names of parts


## Product

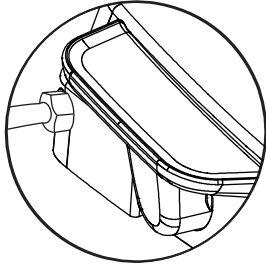

Bidet Water Supply Connection

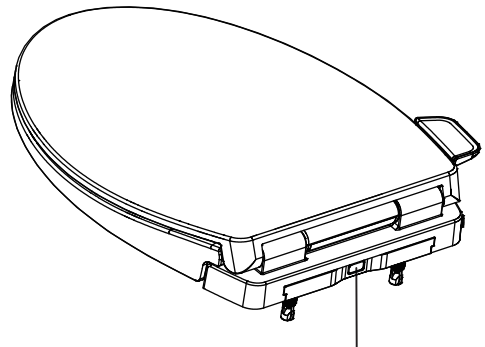


Quick release button

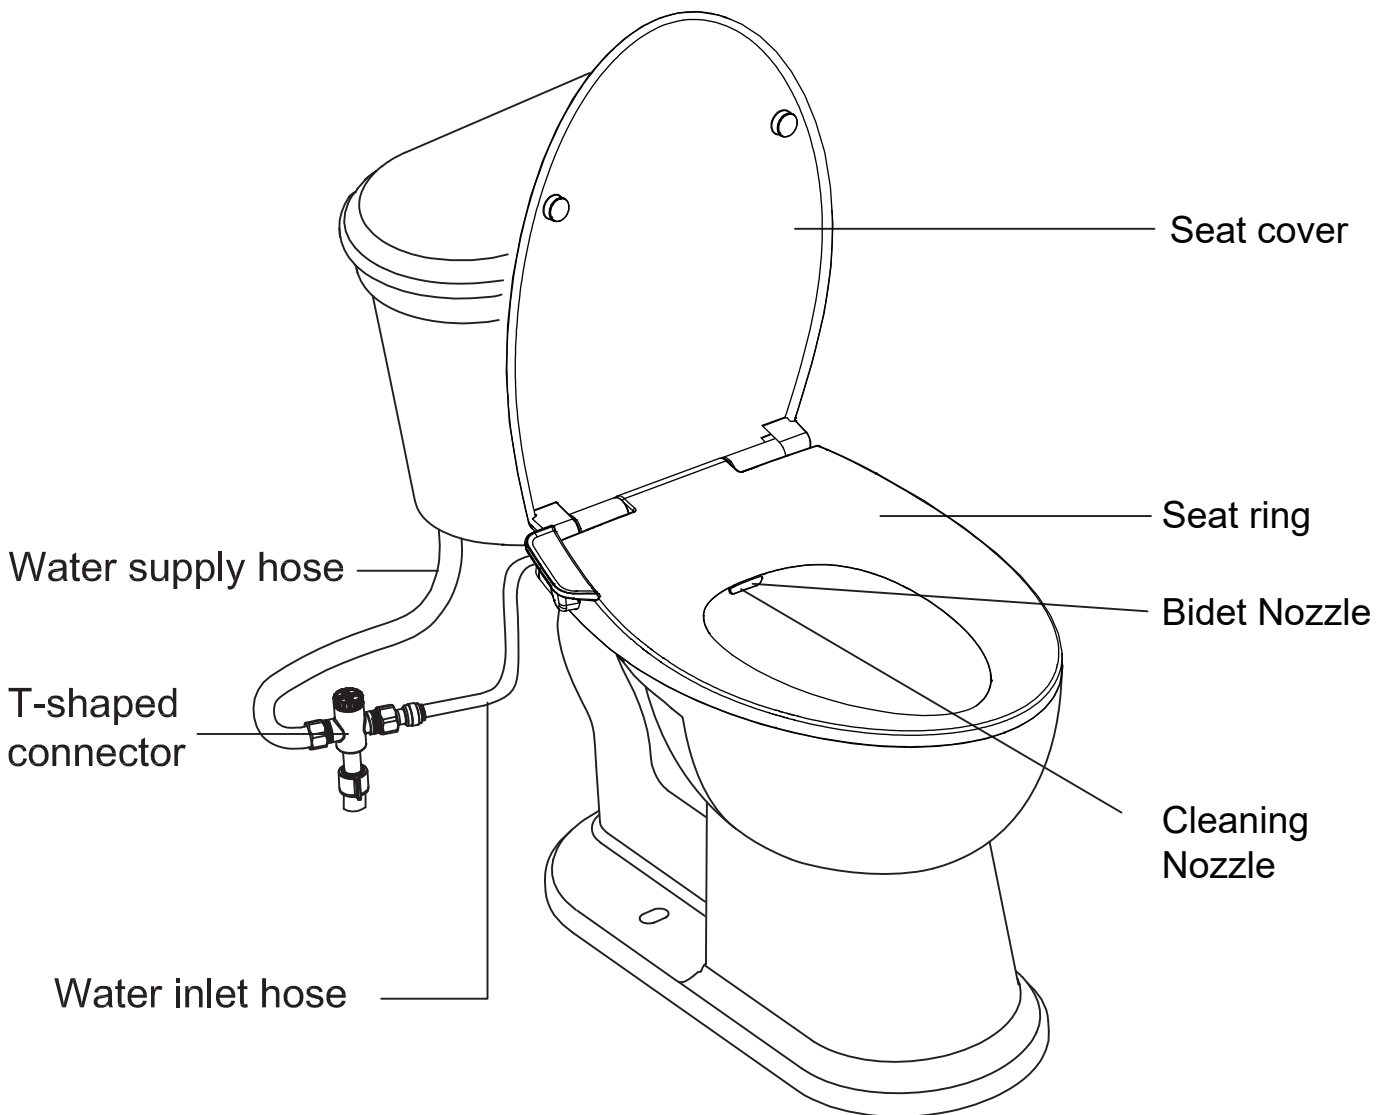

## ■ Components

### 1. Bidet Seat

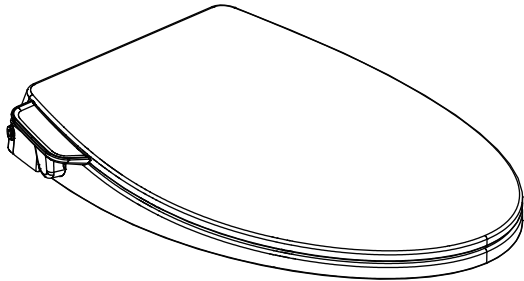


### 2. Mounting Kit



Bolts(2)


Sliding plates(2)

nuts(2)

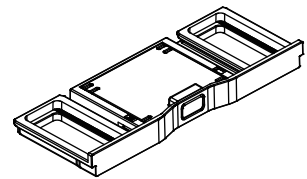


Seat Mounting Plate


### 3. T-shaped adapter

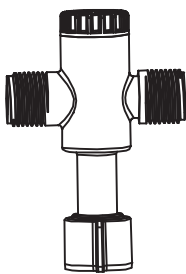

### 4. Water inlet hose

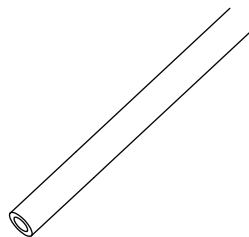

### 5. Installation and User Manual

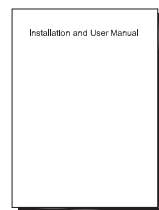

## 2 Installation

Please make sure you read the instructions carefully and install it properly.


### ■ Cautions

1. The water pressure limit is from 0.07 to 0.6 MPa(10-87PSI). Please use as instructed.
2. The water shut-off valve should be near to where the product can be installed and dismantled.


### ■ Product Installation Procedures

#### ■ Pre-installation


1. Insert the bolts in sliding plates

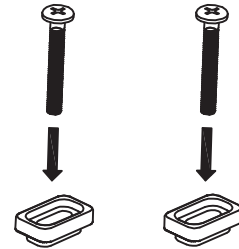

2. Press the release button and remove the seat mounting plate.

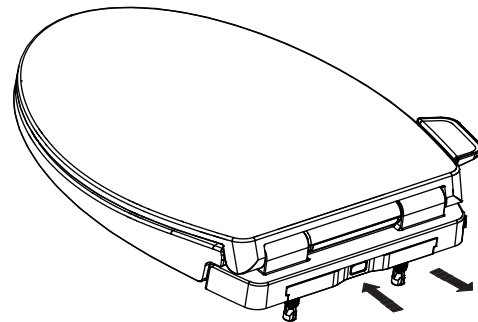


3. Insert bolts with sliding plates into the Seat Mounting Plate.

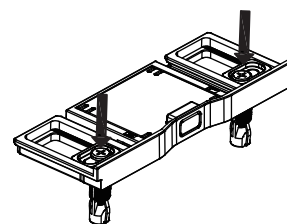


## ■ Installation Procedure

1. Install the nuts into the holes in the toilet bowl.

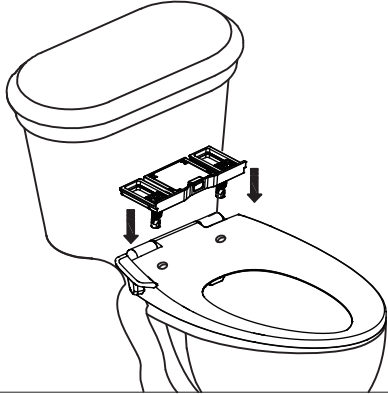

2. Place the Mounting plate with bolts and sliding plates onto the toilet bowl. Align the bolts and sliding plate with the seat post hole.

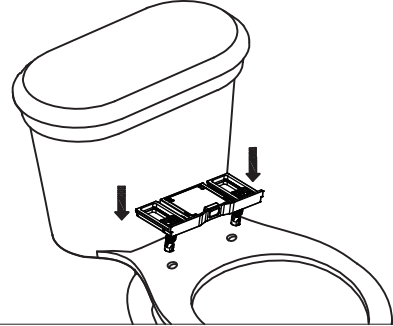


3. Screw the bolts into the nuts. Do not fully tighten.




4. After mounting the mounting plate, slide the bidet seat fully into position until it clicks into place.



5. Adjust the bidet seat evenly over the toilet bowl.

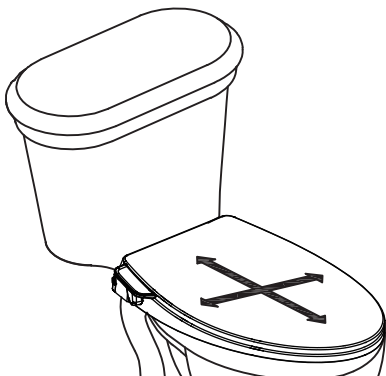


6. Press the quick release button to release the seat.

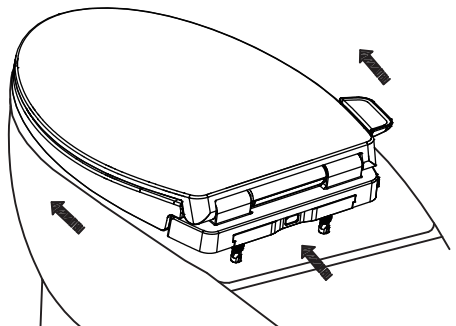

## ■ Installation Procedure

7. Fully tighten the bolts once the bidet seat is in correct position.

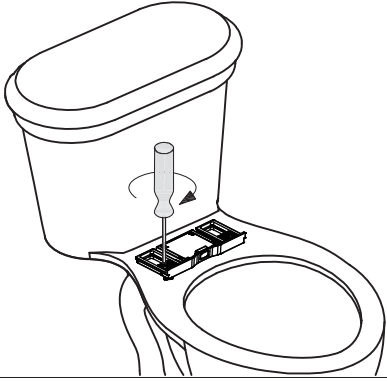


8. Reinstall the bidet seat until it fully clicks into position.




## ■ Connecting water hose


1. Shutting off the water valve and detach water pipe from the water tank. Connect the T-shaped connector to the water tank and the water valve. Make sure that rubber packing is inserted in between shut-off valve and T-shaped connector.

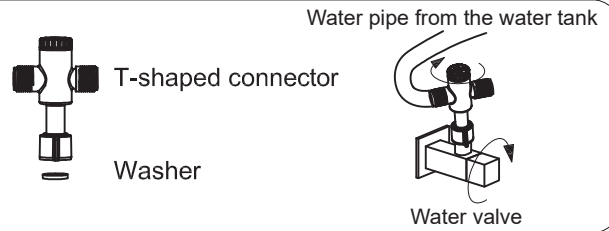


2. Connect the nut of supply hose with T-shaped connector, and fully tighten.

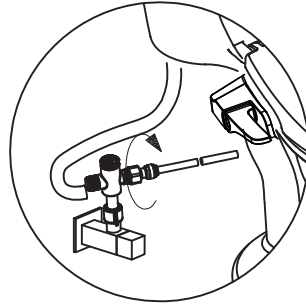

3. Insert the supply hose to the hose connector of seat.

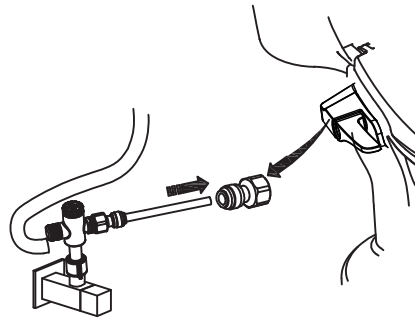


4. Turn on the water valve to check if there is any leakage.

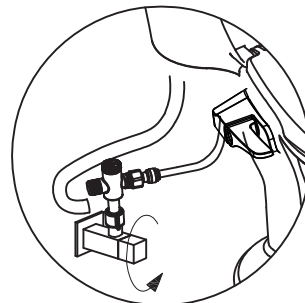


## ■ Disassembling water hose

1. Press the spring button of the hose connector and pull out the PE hose.

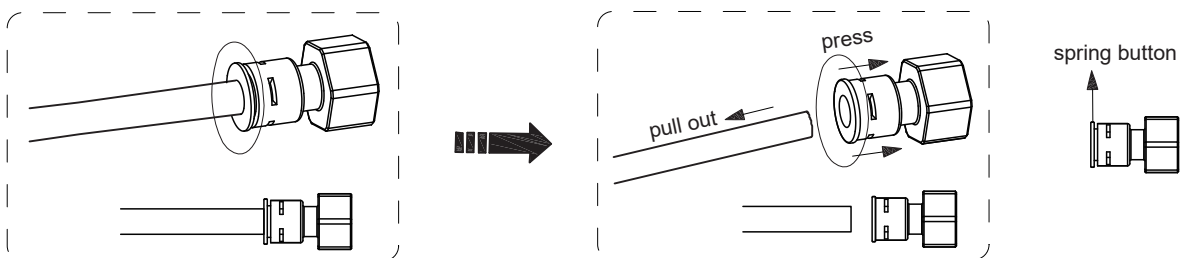


1. Do not lift the product with the seat cover and seat open.  
2. Cannot use with the hot water which temperature is higher than 40° C. This may cause a mechanical trouble.


# 3 Operation

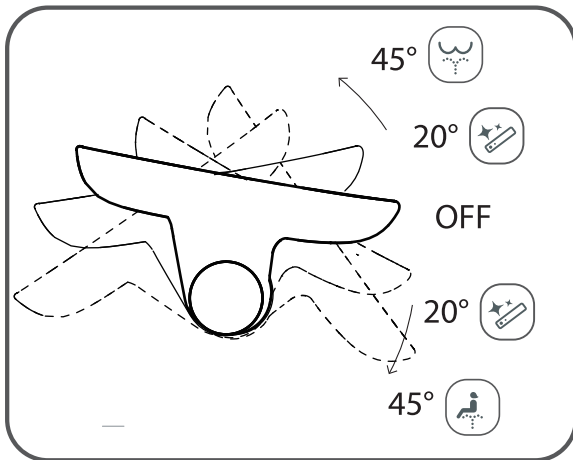


4 separate positions

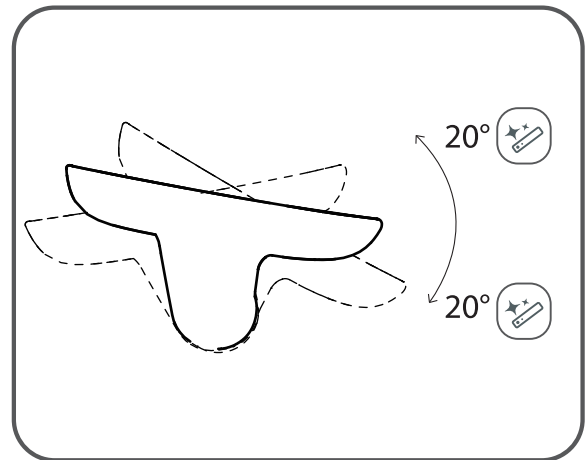

20° upwards or 20° downwards:  
for nozzle self-cleaning.

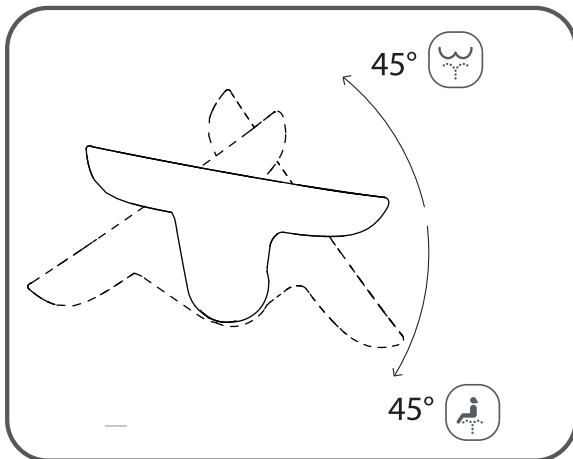

45° upwards - Back Cleansing  
45° downwards - Front Cleansing

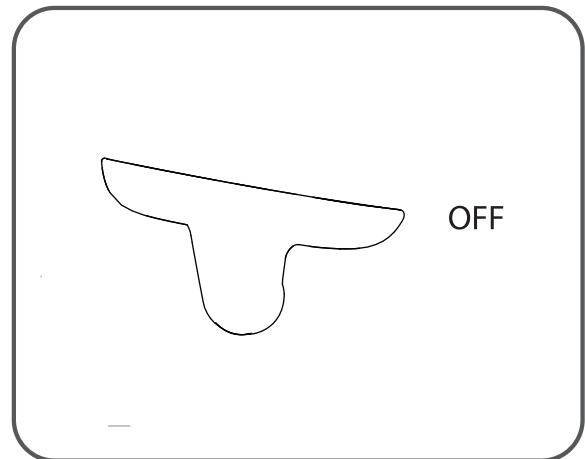

0° - OFF





## 4

# Care and Cleaning


## 1. Cleaning Seat and Lid.

Use a smooth sponge/cloth with a mild cleanser to clean the product. Do not use the following: hydrogen chloride detergent, paint thinner, benzene, abrasive paper, polishing agent, fragrances and insecticide, etc.

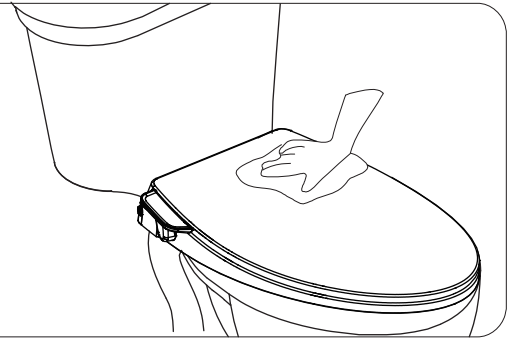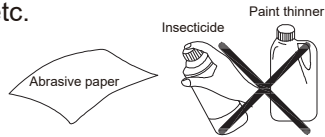


## 2. Clean the nozzle.

Pull out the nozzle softly and use smooth cloth/sponge or toothbrush with a mild cleanser to clean the nozzle.

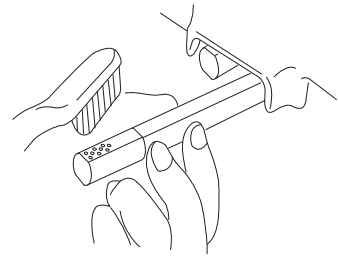


## 3. Seat & Cover release.

Open the seat and cover to 90° and lift the seat & cover upwards to release. After cleaning, insert the seat & cover into the holes perpendicularly to install the seat.

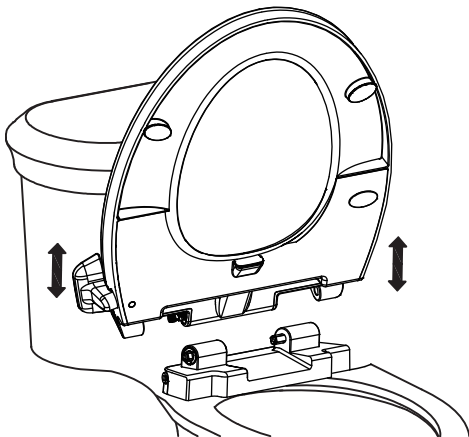

## 4. To release the whole Bidet Seat.

Press the button, pull the seat forward.

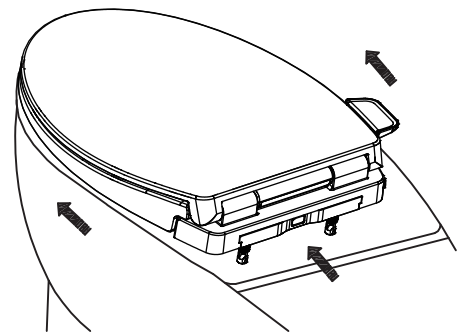


## 5 Product maintenance

### 1. Lever replacement.


As per figure A, remove the old lever along the axis direction.

As per figure B, insert the new lever rib into the corresponding control valve slot. The installation is completed with a "click" sound.

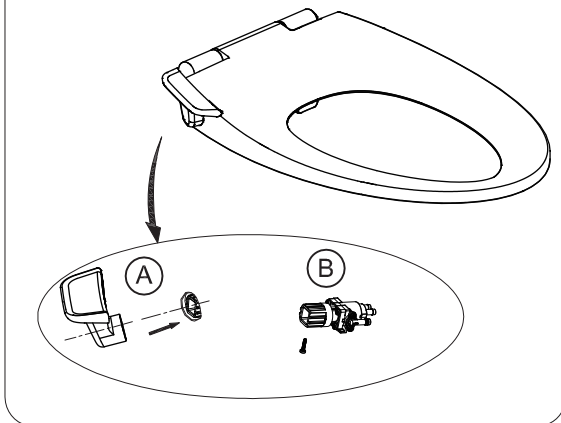


### 2. Nozzle tip replacement

As per figure A, pull out the nozzle and remove the nozzle tip along the axis direction as per figure B, insert the new nozzle tip into the nozzle along the corresponding slot.

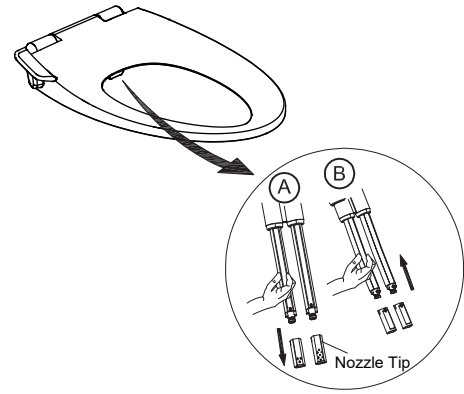

### 3. Water hose leakage

If water leakage is detected from the water hose, re-tighten the hose connection.

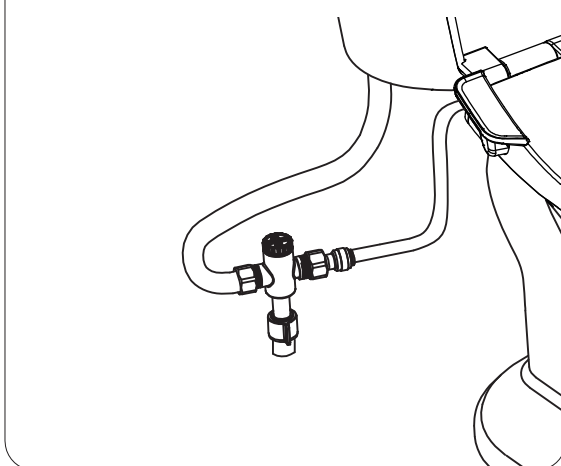

## 6

# Self Diagnosis and Specifications

## Self Diagnosis and Trouble shooting

Status	Cause	Solution
Water flow to pressure is too low during Cleansing/Bidet	1.Low water pressure of the unit	1. Adjust the water pressure volume by the lever. 2. Assure the nozzle tips are clean.
	2.Low water pressure of water supply	1.Check if the water pressure is above 10 psi. 2. Fully open the shut-off valve 3. Check if there are any kinks on the water supply hose.
No water comes out during Cleansing/Bidet	1. Water shut-off valve is turned off	Turn on the water shut-off valve
	2. Filter net of T-shaped connector is stuck	Clean the filter net of T-shaped connector
	3. Nozzle tip is stuck	Take off and clean the nozzle tip
	4. External water pressure is low	Increase external water pressure.
Water dripping into the bowl when using the unit	External water pressure is too high	The maximum water pressure of the unit is 0.8MPa.



**Caution**

Do not disassemble, repair or modify the unit.

## Specifications

Classification	Description
Model No.	M4A839
Back Cleansing water flow volume	0.4 - 1.4 L/min
Front Cleansing water flow volume	0.4 - 1.4 L/min
Backflow Prevention	Backflow Prevention
Water Supply	Direct from water pipes
Water Pressure Range	Static pressure: 0.05-0.6MPa, Dynamic pressure:above 0.03Mpa
Dimensions	494X394X80mm
Weight	2.0KG

## To request service:

1. Please recheck the user's manual.
2. If failure or damage occurs after referring the manual, stop using the product and contact the retailer or local service center.

# Warranty Card

Dear Customer,

Thank you for choosing the product! If failure or damage occurs, please check the product based on the trouble shooting guide in this manual first. If the failure/damage could not be fixed, please contact the retailer or local service center with proof of purchase.

## A. Related Info:

Customer	Name:		
	Address:		
	Tel.:		
Retailer	Name:		
	Tel.:		
Model No.		Series No.	
Date of Purchase		Warranty time	1 Year from the date of purchase

## B. Notes about the warranty card:

1. Please make sure that the above info is completed in the warranty.
2. This warranty and invoice are important documents for product maintenance. During warranty period, when the retailer or service people come for product maintenance, please present the Warranty and invoice.
3. This warranty cannot be reissued. Keep it in a proper place.

## C. Free repairment policy:

During warranty period, if product failure/damage occurs under normal operation according to the user manual, free repair service will be provided.

## D. The following repairment or maintenance should be paid:

1. Failure occurs out warranty period;
2. If this warranty/invoice is not presented;
3. Failure/damage occurs due to transportation/collision of the product after purchase;
4. Failure/damage occurs due to natural disasters such as fire, earthquake, flood damage, lightning or by environmental pollution, gas and abnormal voltage;
5. Failure/damage due to user's responsibility, improper repairment or reassembling of the product;
6. Failure/damage due to improper cleaning for product (e.g. improper use of detergent or cleaning method);
7. Failure/damage due to sand, junk or other unexpected goods from water supply;
8. Relocation of the product up to end user's requirement.