
Test / Usage

1 Test


- * Move handle down into "OFF" position. Turn on supply angle valve to check all connections for leak.
- * Operate handle up and down, left and right to flush water lines thoroughly.

2 Usage

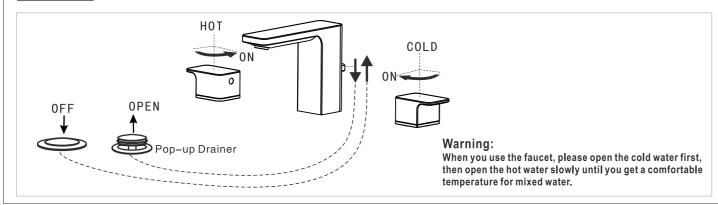

Trouble Shooting Guide

| Trouble | Checkpoint | Contents | Action |
|------------------------|-------------------|---|--|
| Poor flow rate | Regulator | Check any impurities. | Remove all impurities. |
| | Angle valve | Check valve position. | Open it to full valve |
| | Flexible hose | Check if hose is twisted. | Untwist the hose. |
| Leakage | Cartridge packing | Check cartridge install. | When packing is damaged, replace the cartridge. |
| | Hose junction | Check the connection. | Check the existence of packing and wind it up sufficiently |
| Deviant Temperature | Supply valve | Check if the water from supply valve is enough or not | Increase water supply |
| | Supply system | Check if the supply pipe connected correct or not | Connect the hot and cold water pipe correctly |

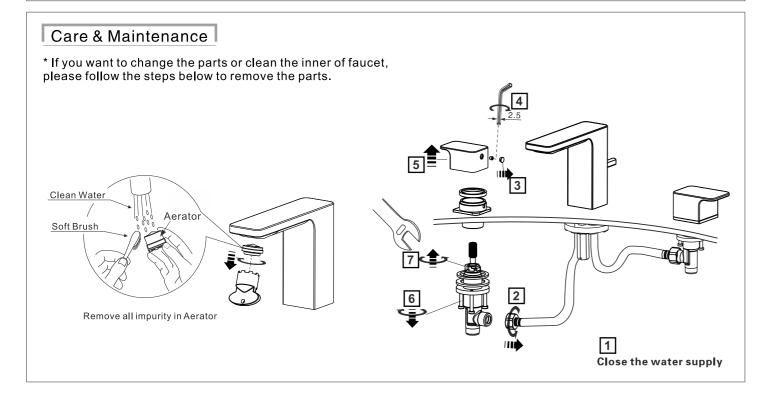

- 4 -




Attention:
Please Leave the manual with the customer after installation is finished.

Acacia-Evolution

FFAS1303-101XXXBF0 FFAS1303-101XXXBT0 Acacia Evolution 3H Basin Mixer

 XXX = AL0 / A00 / DA0 / GL0 / 440 / 500





Thank you for selecting American-Standard - the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

- * American Standard always keep raising and improving the product design and performance, and reserve the right to modify the dimension and spefication. At this case, we will not inform you separately.
- * This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.

All instruction procedures must comply in strict accordance with applicable local plumbing and building codes


Pre-Installation Checks


- *Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.
- * Check installation distances in the Dimension diagram to ensure correct installation.

Conditions for use

- * Recommended water pressure condition: 0.1~0.5Mpa.
- * Environment Temperature:1~55°C
- * Steam is not allowed to use.
- * The cold and hot water pipes must not be reserved.


When in the process of installation, Please grab the body. Do not grab handle only.

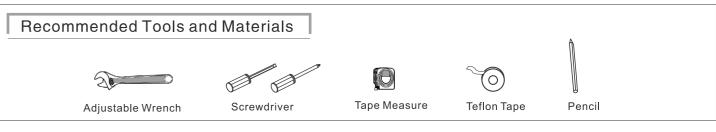


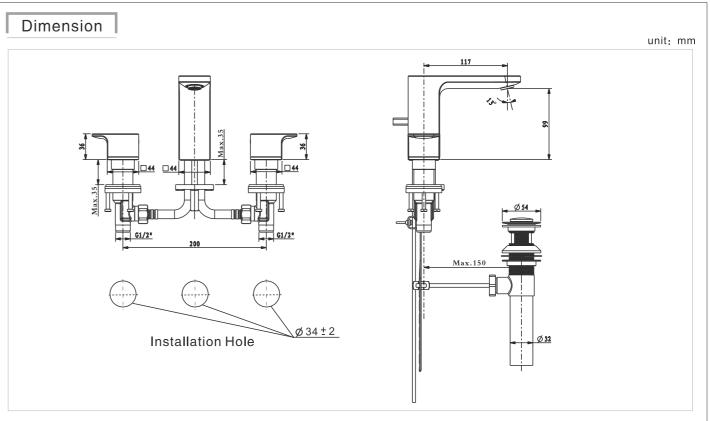


- 1 -

Rev. FF1-CN521K00566299/A0

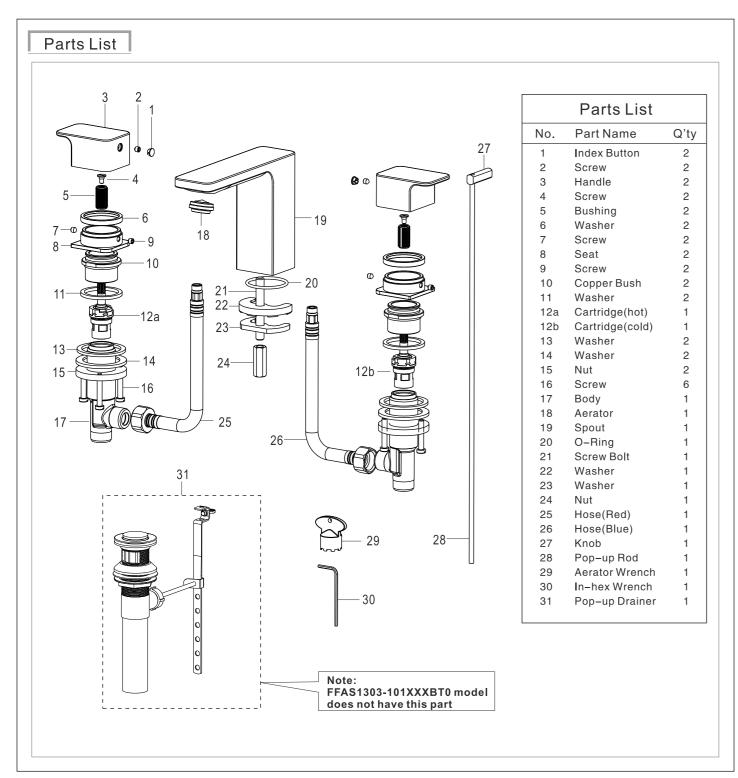

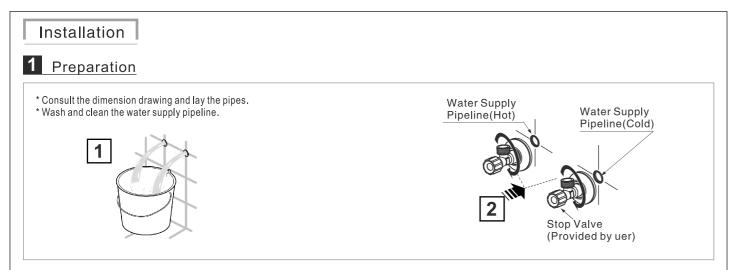

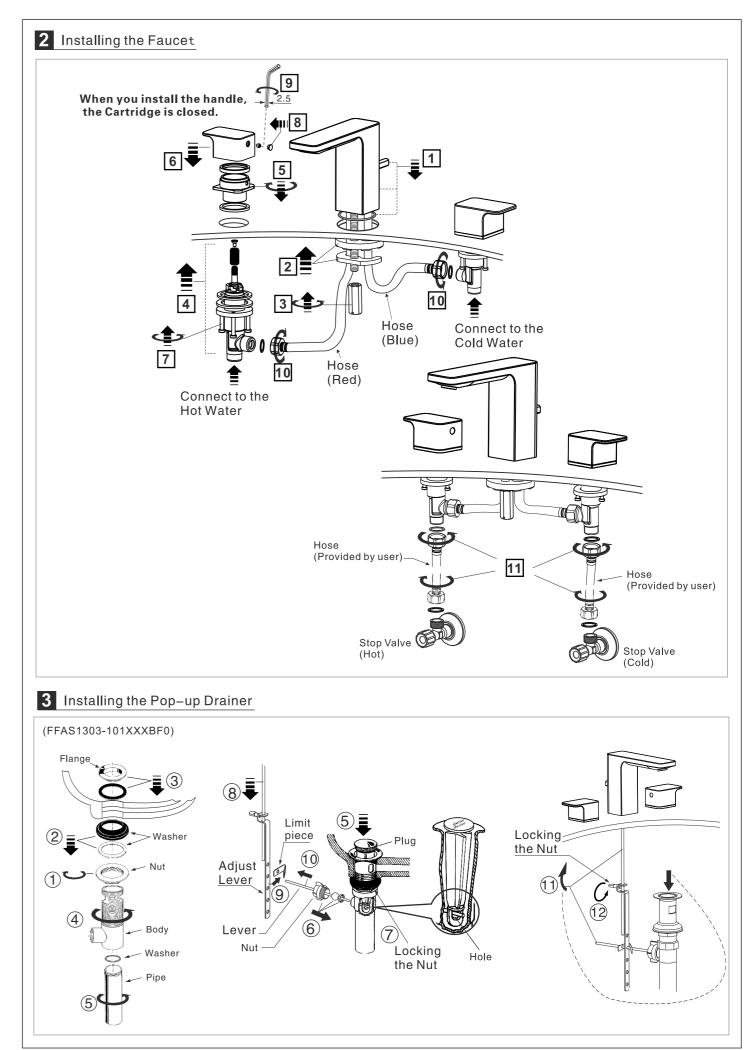

-2-