
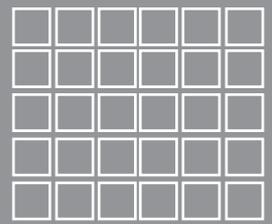


To ensure that your installation proceeds smoothly, please read this instructions carefully before you begin.

American Standard

Acacia-Evolution


FFAS1304-102500ZN0
A/Std Acacia E Wall Basin Mixer Set CP

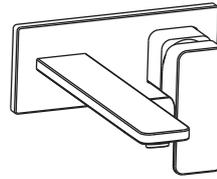

Installation & Operation Instruction


Dimension

Unit: mm

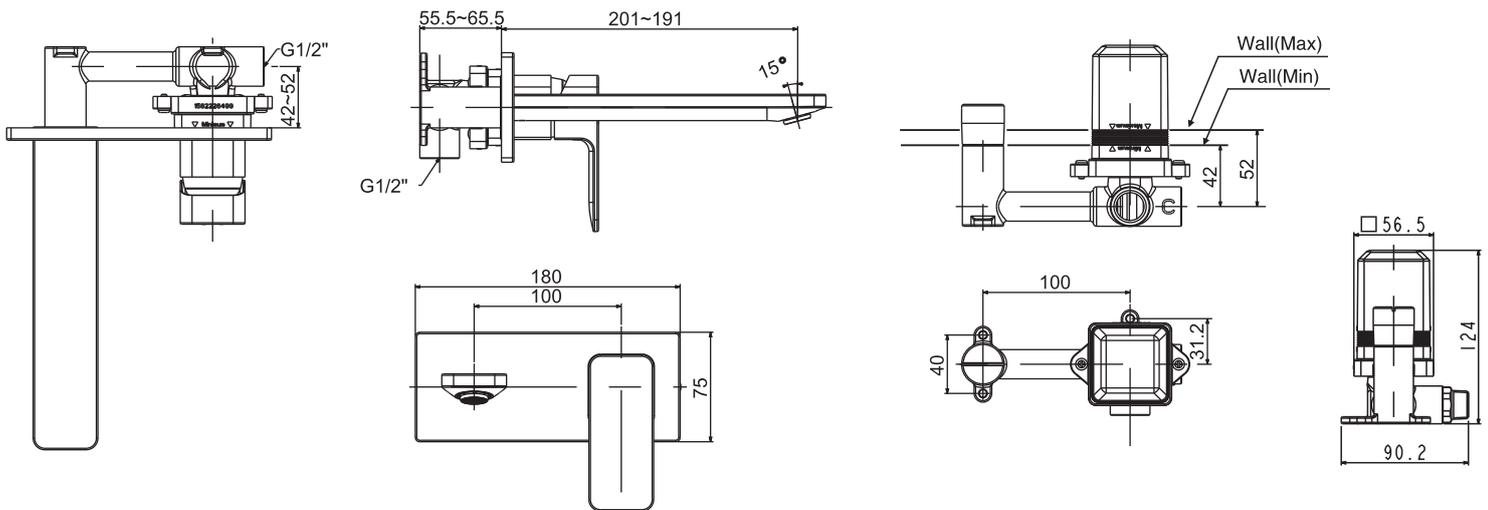


Installation

1 Preparation

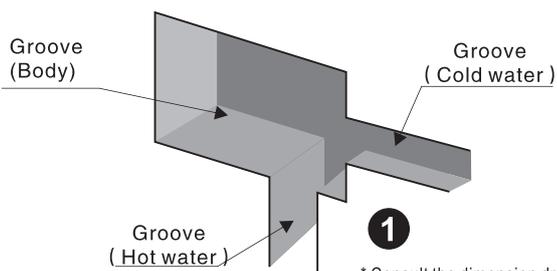



* Consult the dimension drawing and lay the pipes.

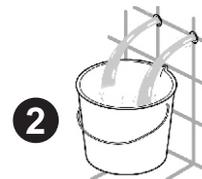


* Wash and clean the water supply pipeline.

2 Body Installation

* Finishing wall should be between the minimum and the maximum.

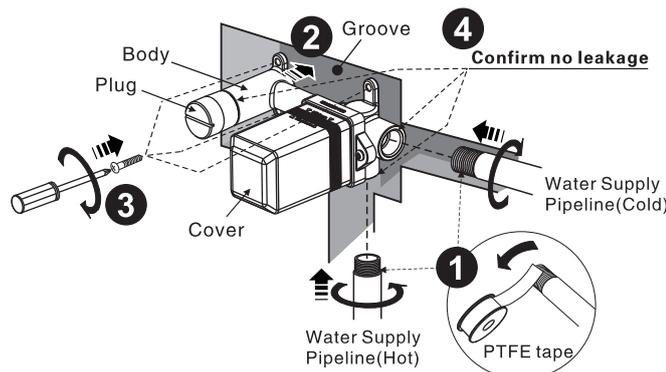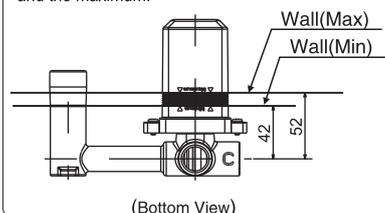


Tiler to cut hole size □30~35mm

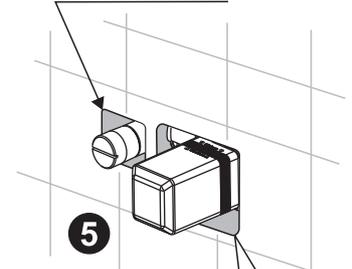


Tiler to cut hole size □55~60mm

3 Spout & Handle Installation

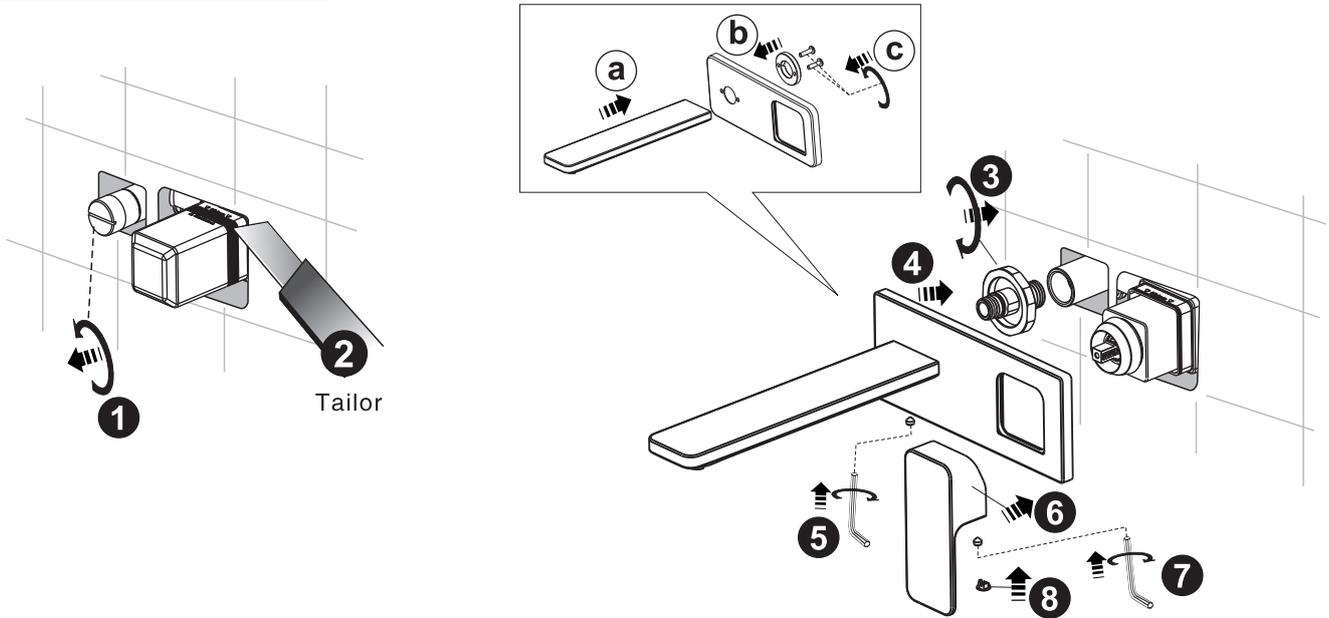

Parts List

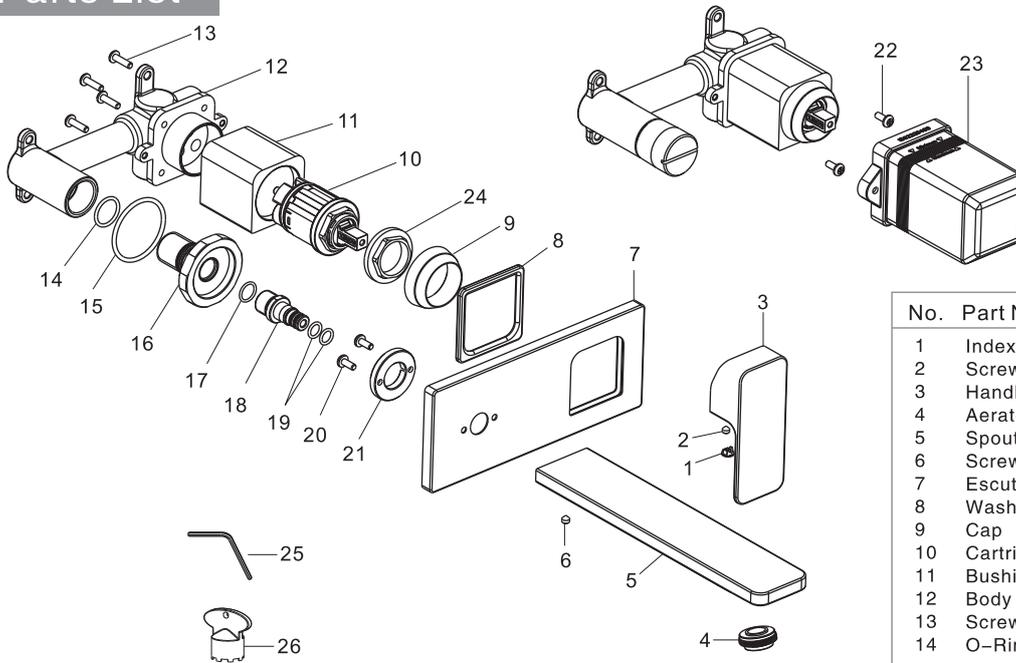

No.	Part Name	Q'ty	No.	Part Name	Q'ty
1	Index Button	1	15	O-Ring	1
2	Screw	1	16	Connector	1
3	Handle	1	17	O-Ring	1
4	Aerator	1	18	Connector	1
5	Spout	1	19	O-Ring	2
6	Screw	1	20	Screw	2
7	Escutcheon	1	21	Fixing plate	1
8	Washer	1	22	Screw	1
9	Cap	1	23	Cover	1
10	Cartridge	1	24	Nut	1
11	Bushing	1	25	In-hex Wrench	1
12	Body	1	26	Aerator Wrench	1
13	Screw	4			
14	O-Ring	1			

Notice

- * Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.
- * Check installation distances in the Dimension diagram to ensure correct installation.

Conditions for use

- * Recommended water pressure condition: 0.1~0.5Mpa.
- * Environment Temperature: 1~55°C
- * Steam is not allowed to use.
- * The cold and hot water pipes must not be reserved.

When in the process of installation, Please grab the body. Do not grab handle only.

AUS

Reece Australia Pty Ltd
118 Burwood Hwy
Burwood VIC 3125

Tel.: 1800 080 055
Email: customercare@reece.com.au



NZ

Robertson
25 Vestey Drive
Mt Wellington, Auckland

Tel.: +64 9 5730490
Email: sales@robertson.co.nz