


## Test / Usage

### 1 Test

- \* Turn handle to "OFF" position. Open supply angle valve to check all connections for leakage;
- \* Turn handle to "ON" position. Check the water flow .

### 2 Usage

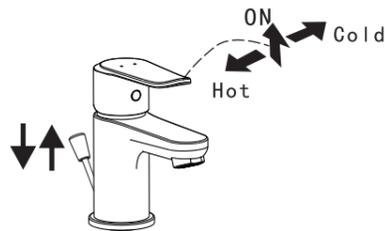


## Trouble Shooting Guide

Trouble	Checkpoint	Contents	Action
Poor flow rate	Regulator	Check any impurities.	Remove all impurities.
	Angle valve	Check valve position.	Open it to full valve
	Flexible hose	Check if hose is twisted.	Untwist the hose.
Leakage	Cartridge packing	Check cartridge install.	When packing is damaged, replace the cartridge.
	Hose junction	Check the connection.	Check the existence of packing and wind it up sufficiently
Deviant Temperature	Supply valve	Check if the water from supply valve is enough or not	Increase water supply
	Supply system	Check if the supply pipe connected correct or not	Connect the hot and cold water pipe correctly

## Care & Maintenance

- \* If you want to do the maintenance for the faucet, please follow the below process.
- \* Before maintenance, please shut off the water supply system.

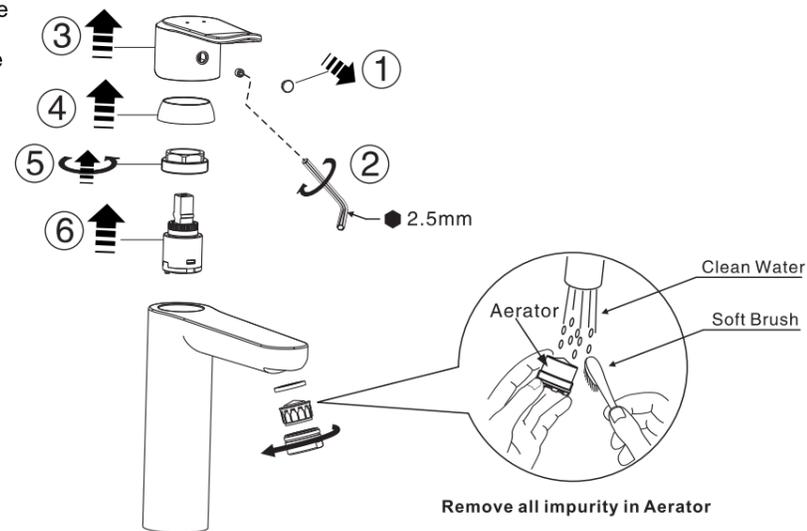


**Attention:**  
Please Leave the manual to the customer after installation is finished.

## Neo Modern

- FFAS0701-102500BF0 (WF-0701.102.50)  
Single Hole Lava. Faucet  
(LEEDS-0.5GPM/1.89LPM)
- FFAS0703-102500BF0 (WF-0703.102.50)  
Single Hole Extended Lava. Faucet  
(LEEDS-0.5GPM/1.89LPM)



 FFAS0701-102500BF0



FFAS0703-102500BF0

American Standard



**Thank you for selecting American-Standard - the benchmark of fine quality for over 100 years.**  
**To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.**

- \* American Standard always keep raising and improving the product design and performance, and reserve the right to modify the dimension and specification. At this case, we will not inform you separately.
  - \* This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.
- All instruction procedures must comply in strict accordance with applicable local plumbing and building codes

## Pre-Installation Checks

- \* Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.
- \* Check installation distances in the Dimension diagram to ensure correct installation.

### Conditions for use

- \* Recommended water pressure condition: 0.1~0.5Mpa.
- \* Environment Temperature: 1~55°C
- \* Steam is not allowed to use.

When in the process of installation, grab the whole body. Do not grab handle only.

## Recommended Tools and Materials




Adjustable Wrench




Tape Measure

## Dimension

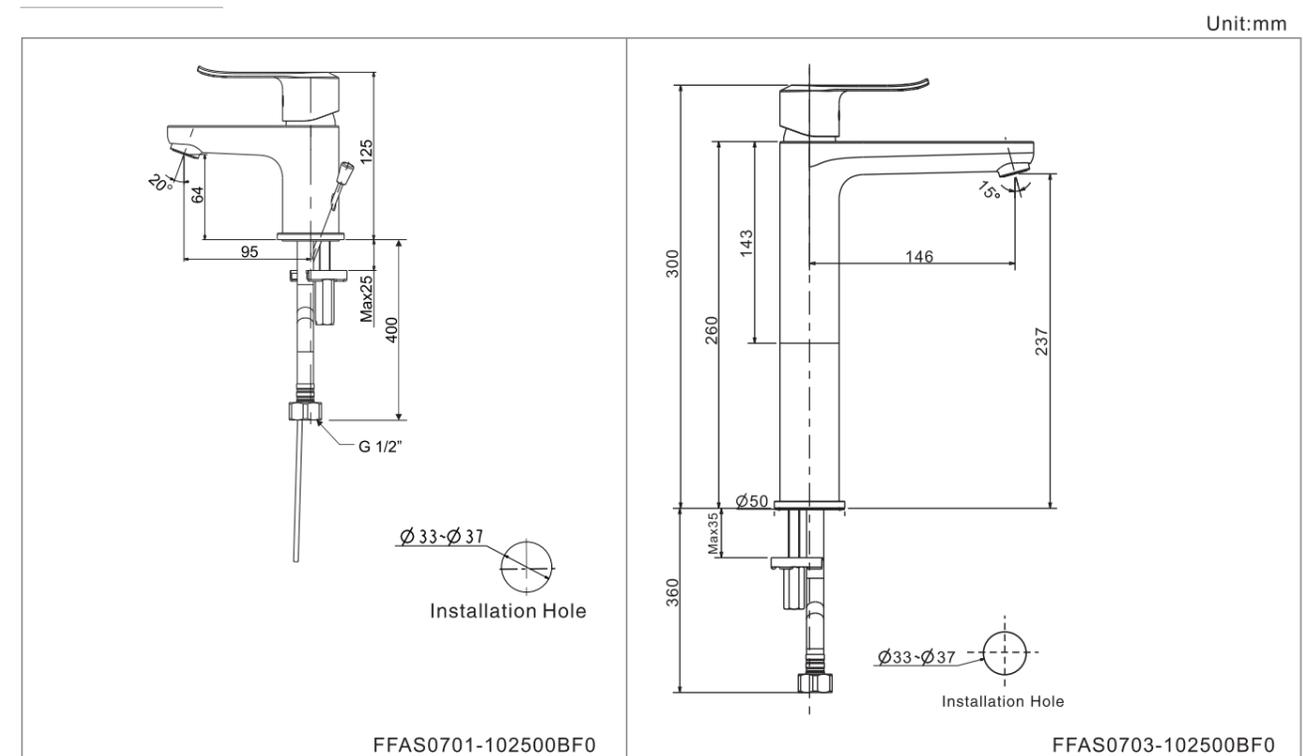



## Parts List

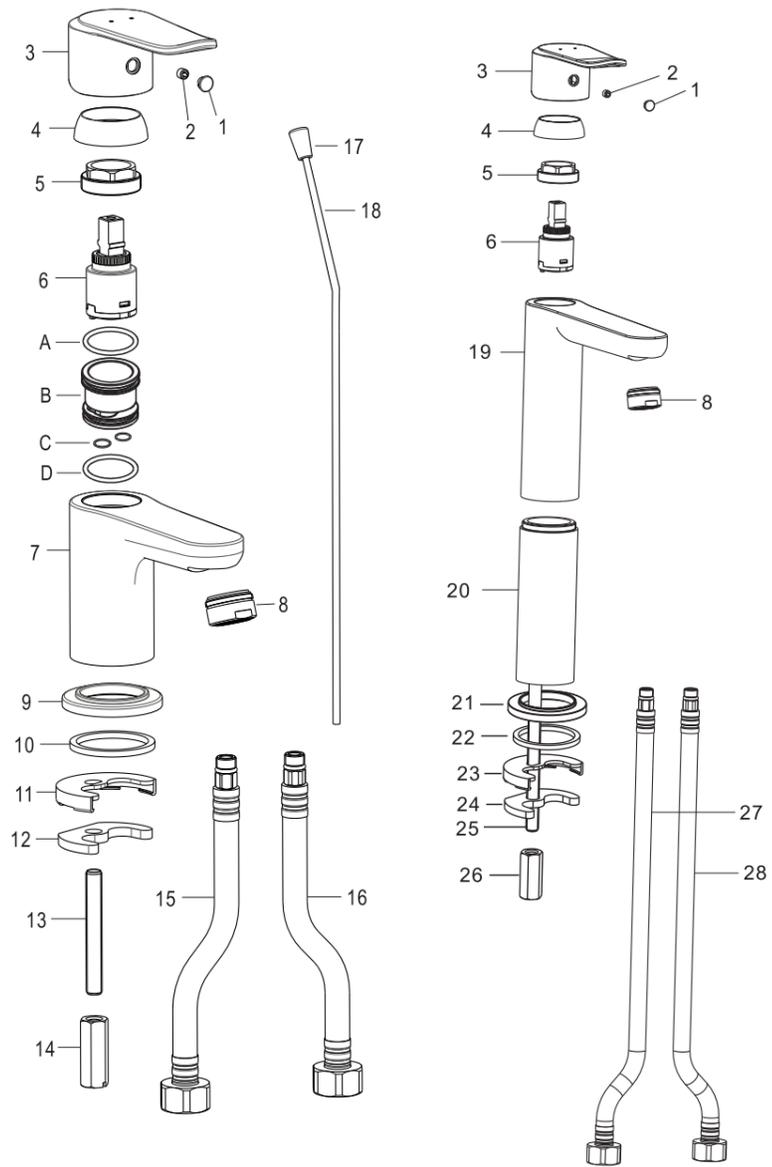

Parts List			
No.	Part Name	Q'ty	
FFAS0701 / FFAS0703			
1	Index Button	1	1
2	Screw	1	1
3	Handle	1	1
4	Cap	1	1
5	Nut	1	1
6	Cartridge	1	1
7	Body	1	0
8	Aerator	1	1
9	Escutcheon	1	0
10	Washer	1	0
11	Washer	1	0
12	Washer	1	0
13	Shank	1	0
14	Nut	1	0
15	Hose (Red)	1	0
16	Hose (Blue)	1	0
17	Pop-up Knob	1	0
18	Pop-up Rod	1	0
19	Body	0	1
20	Pipe	0	1
21	Escutcheon	0	1
22	Washer	0	1
23	Shank	0	1
24	Washer	0	1
25	Washer	0	1
26	Nut	0	1
27	Hose (Red)	0	1
28	Hose (Blue)	0	1
A	O-Ring	1	0
B	Valve Seat	1	0
C	O-Ring	2	0
D	O-Ring	1	0



## Installation

### 1 Preparation

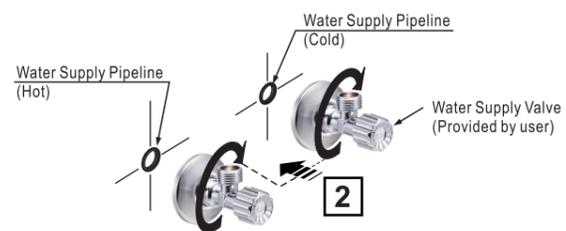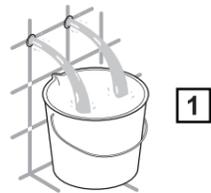


- \* Consult the dimension drawing and lay the pipes.
- \* Wash and clean the water supply pipeline.

## 2 Installing the Faucet

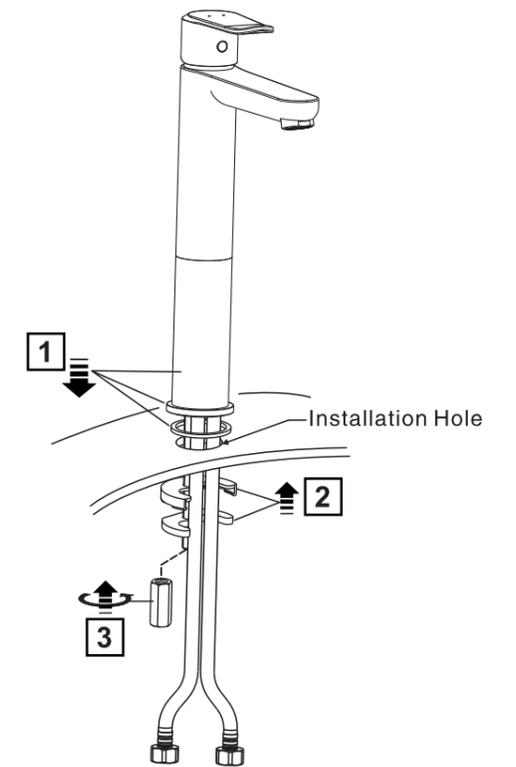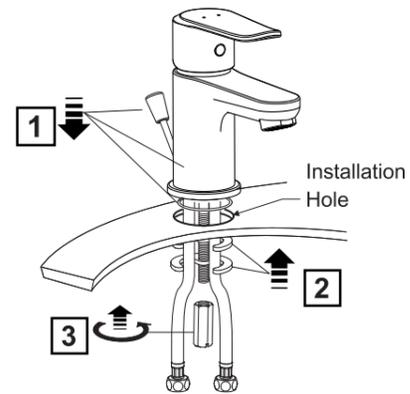

FFAS0701-102500BF0

FFAS0703-102500BF0

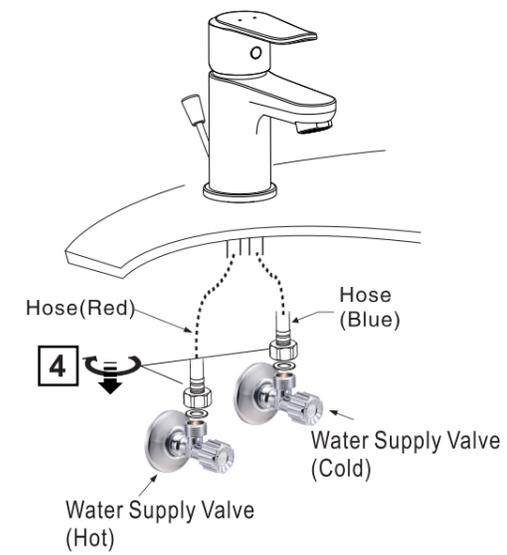

FFAS0701-102500BF0  
FFAS0703-102500BF0