


Test / Usage

1 Test

- \* Turn handle to “OFF”position. Open Water supply valve to check all connections for leakage;
- \* Turn handle to “ON” position. Check the water flow .

2 Usage

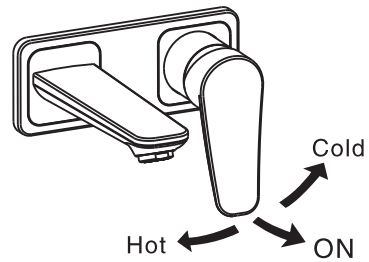


Trouble Shooting Guide

Trouble	Checkpoint	Contents	Action
Poor flow rate	Aerator	Check any impurities.	Remove all impurities.
	Water supply valve	Check water supply valve open position.	Open it to full water supply valve
	Flexible hose	Check if flexible hose is twisted.	Untwist the flexible hose.
Leakage	Cartridge	Check cartridge packing.	When packing is damaged, replace the cartridge.
	Flexible hose connection	Check if the packing is lost. Check if the connection become loosen	Check the existence of packing and fix it again

Care & Maintenance


- \* If you want to change the parts or clean the inside of the faucet, please follow the steps to remove the components.

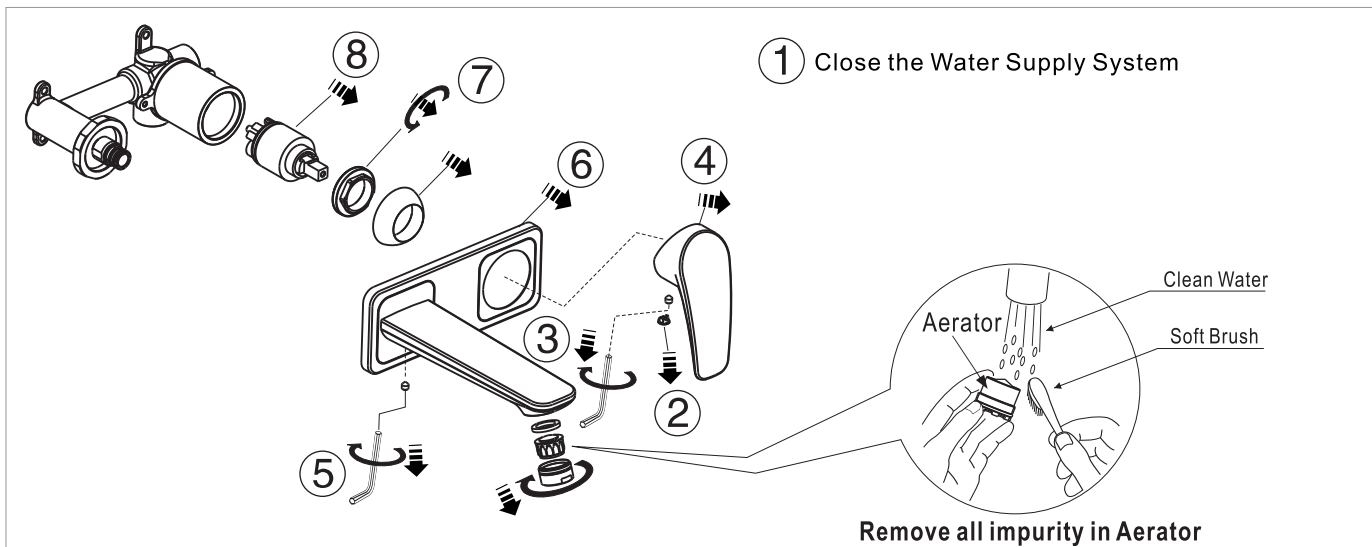


**Attention:**  
Please Leave the manual to the customer  
after installation is finished.

Milano

FFAS0904-102501BF0  
Milano In-Wall Basin Mixer

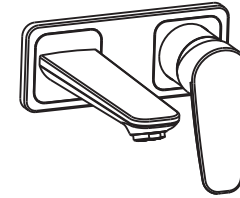

American Standard

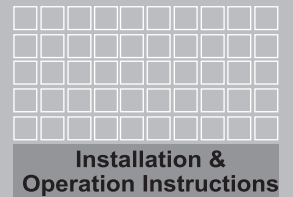

**Thank you for selecting American-Standard - the benchmark of fine quality for over 100 years.**  
**To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.**

- \* American Standard always keep raising and improving the product design and performance, and reserve the right to modify the dimension and specification. At this case, we will not inform you separately.
- \* This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.

Pre-Installation Checks

- \* **All instruction procedures must comply in strict accordance with applicable local plumbing and building codes**
- \* **Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.**
- \* **Check installation the Dimension Drawing to ensure to install it correctly.**

Conditions for use

- \* **Recommended water pressure: 0.1~0.5Mpa.**
- \* **Environment Temperature:1~55℃**
- \* **Steam is not allowed.**

During installation of the faucet, Please grab the body. Do not grab handle only.

Recommended Tools and Materials



Adjustable Wrench



Screwdriver



Tape Measure





windtight swathe




Pencil

Dimension

Unit: mm

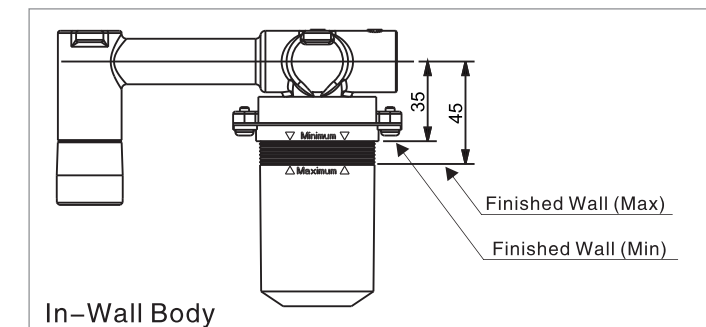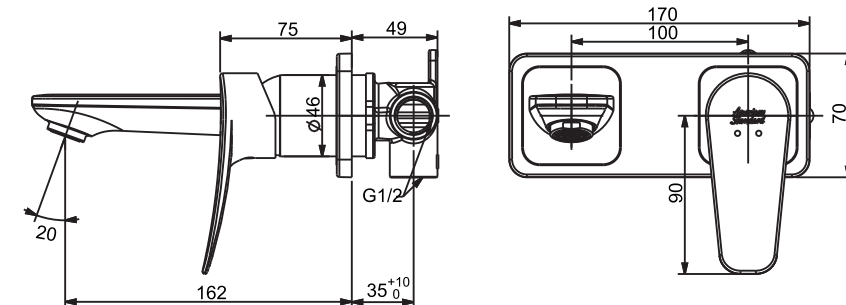

Parts List

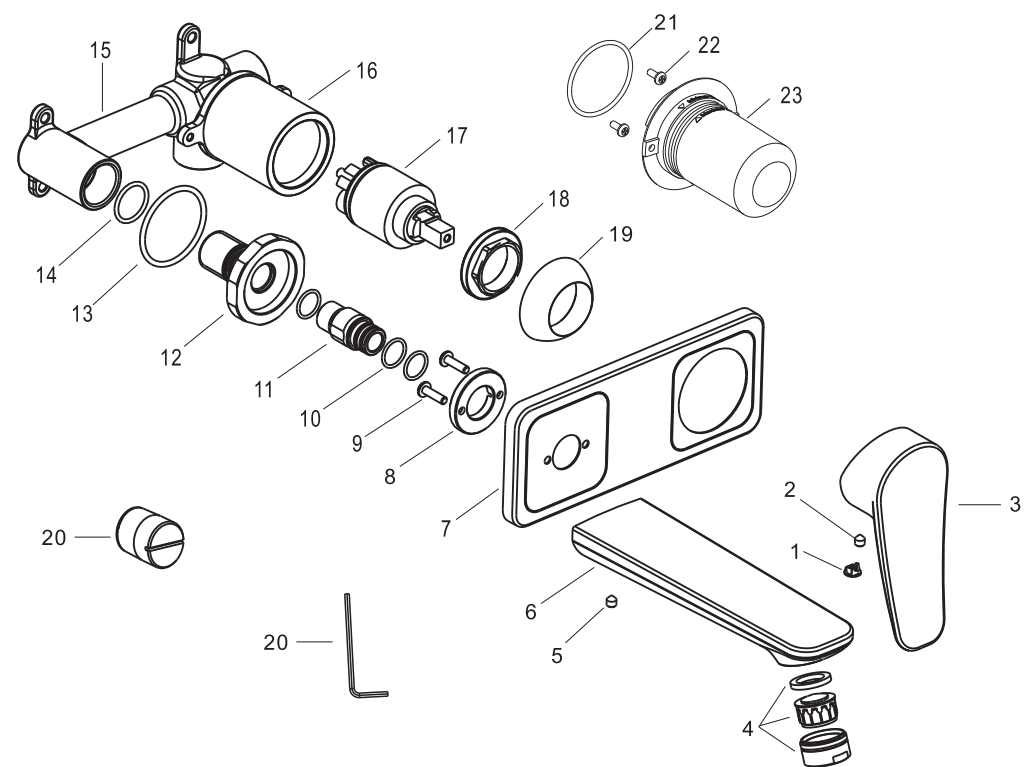


Parts List


No.	Part Name	Q'ty	No.	Part Name	Q'ty
1	Index Botton	1	14	O-Ring	1
2	Screw	1	15	Body	1
3	Handle	1	16	Bush	1
4	Aerator	1	17	Cartridge	1
5	Screw	1	18	Nut	1
6	Spout	1	19	Cap	1
7	Escutcheon	1	20	In-hex Wrench	1
8	Washer	1	21	O-Ring	1
9	Screw	2	22	Screw	2
10	O-Ring	3	23	Protection Cover	1
11	Connector	1	24	Plug	1
12	Connector	1			
13	O-Ring	1			

Installation

1 Preparation

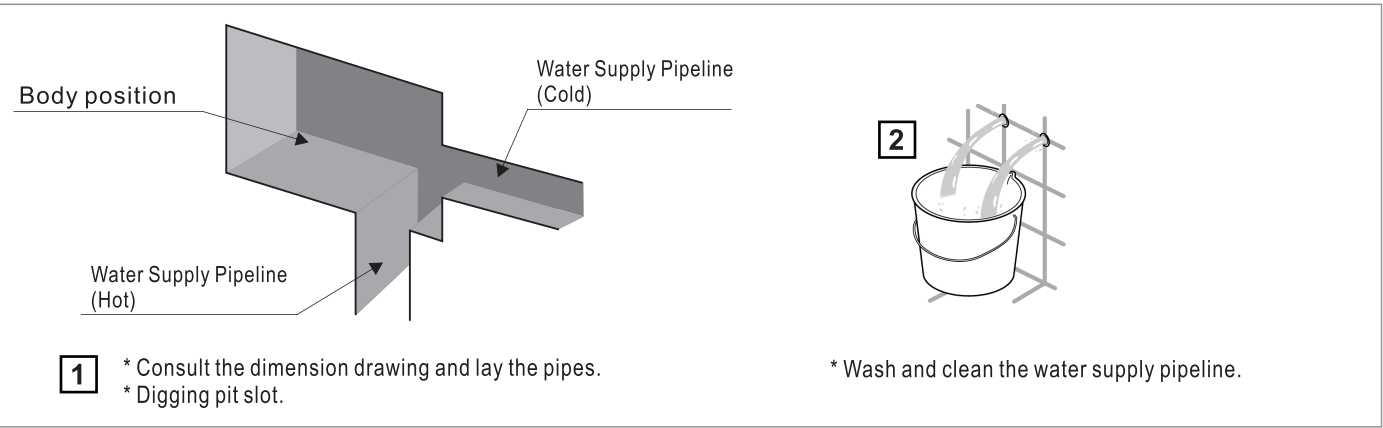

2 Installing the Body

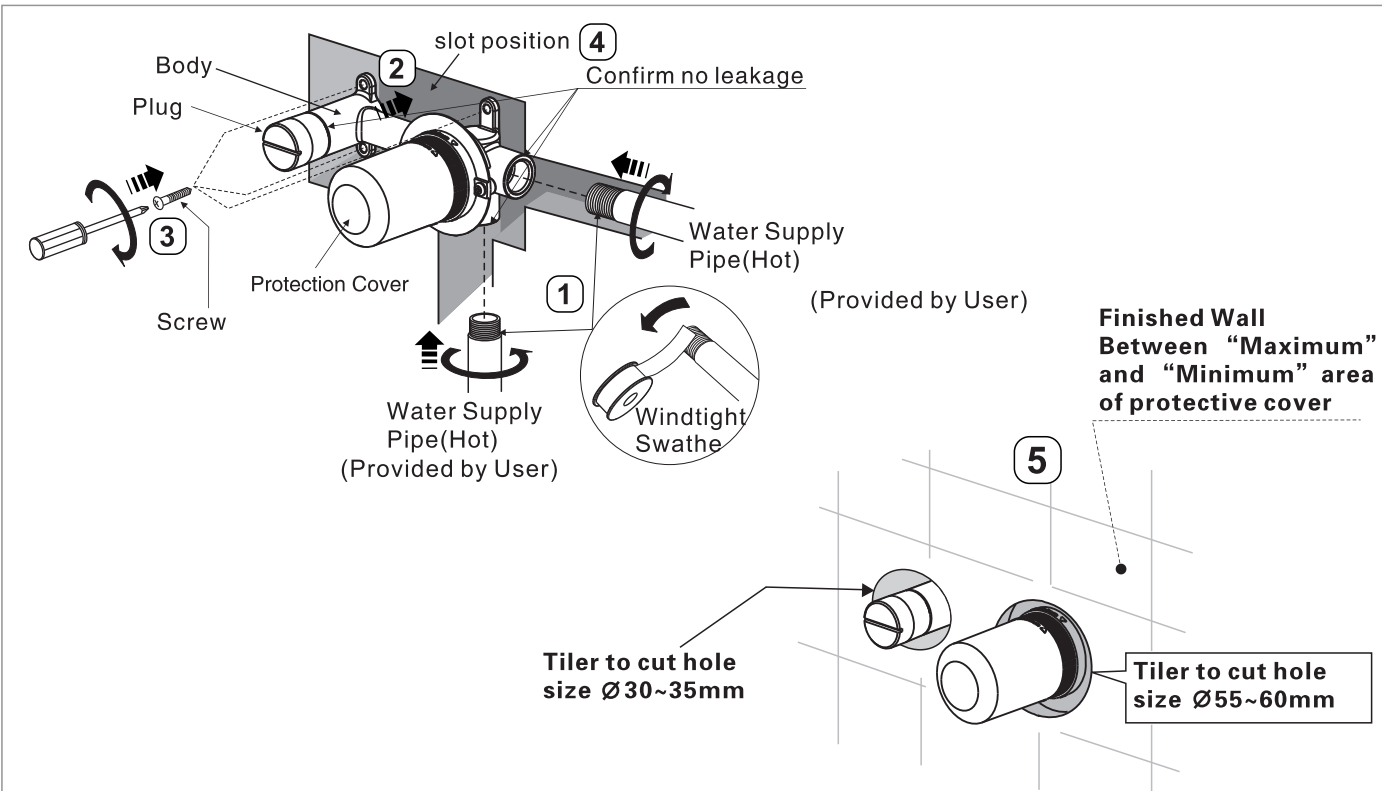

3 Installing the Spout and Handle

