
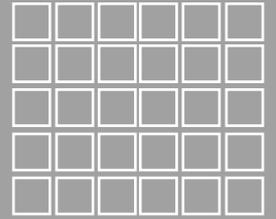


To ensure that your installation proceeds smoothly, please read this instructions carefully before you begin.

*American Standard*

FFASS515-000XXXBF0  
FFASS515-000XXXBT0  
EasySE Exposed 12" Head Shower


XXX = AL0 / A00 / DA0 / GL0 / 440 / 500

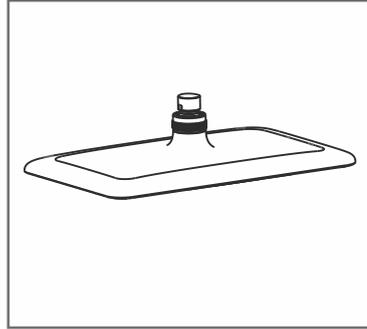

Installation & Operation Instruction


## Dimension

Unit: mm

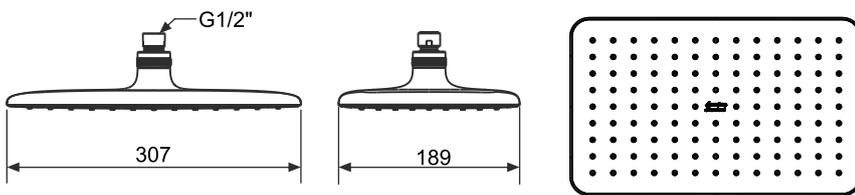


We recommend you should use together with below SKUs.


FFAS9907-000XXXBF0  
FFAS9907-000XXXBT0  
IDS Ceiling Shower Arm

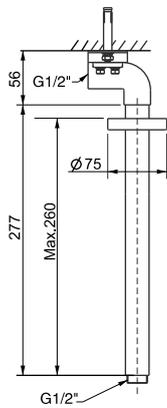


FFAS9908-000XXXBF0  
FFAS9908-000XXXBT0  
Ceiling Shower Arm

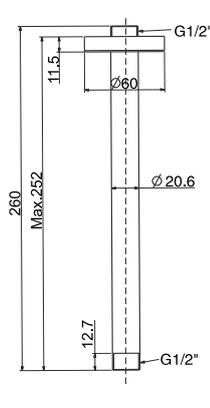


FFAS9909-000XXXBF0  
FFAS9909-000XXXBT0  
In-wall Shower Arm

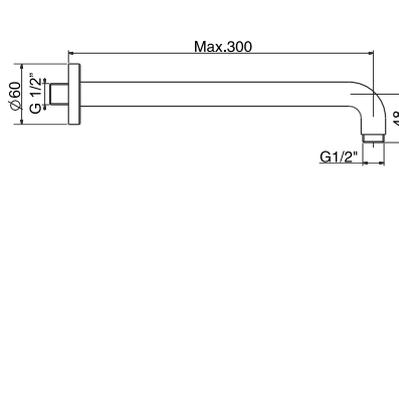


## Installation

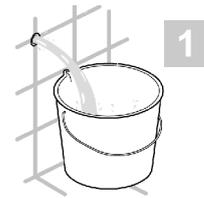

- \* Consult the dimension drawing and lay the pipes.
- \* Wash and clean the water supply pipeline.

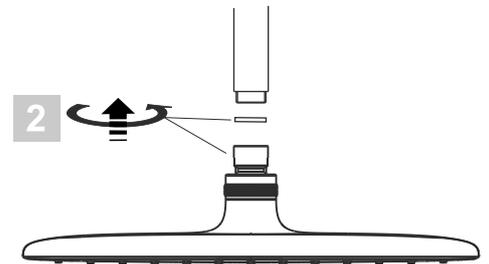

## Parts List

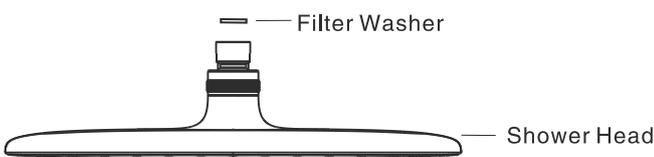

## Notice

Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.

When you repair the faucet you will need to shut off hot/cold water supply by closing the water supply.

### Conditions for use

- \* Water pressure condition: 0.1MPa~0.75MPa (Recommended: 0.1MPa~0.5MPa)
- \* Water supply for this product should be Municipal drinking water.
- \* Environment Temperature: 1°C~55°C
- \* Not for use as a steam outlet.

### Cleaning the surface of faucet

- \* Rinse the product with clean water.
- \* Dry with soft cotton flannel cloth.
- \* Do not clean the product with acid, polish, abrasives, harsh cleaners, or cloth with a harsh surface as these products may damage the finish.