

1 Test

2 Usage

When you use the product, please open the clod water at first, and then add the hot water slowly until the temperature is suitable.




Trouble	Checkpoint	Contents	Action
Poor flow rate	Aerator and shower	Check any impurities.	Remove all impurities.
	Water supply valve	Check valve position.	Open it to full valve
	Flexible hose	Check if hose is twisted.	Untwist the hose.
Leakage	Cartridge packing	Check cartridge install.	When packing is damaged, replace the cartridge.
	Hose junction	Check the connection.	Check the existence of packing and wind it up sufficiently
Deviant Temperature	Water supply valve	Check if the water from supply valve is enough or not	Increase water supply
	Water supply system	Check if the supply pipe connected correct or not	Connect the hot and cold water pipe correctly

- * AERATOR may accumulate dirt causing distorted and reduced water flow. Remove and clean AERATOR and then replace it.
- * If faucet drips, operate handle several times from "off" to "on". Do not apply excessive force.
- * Clogged CARTRIDGE inlets may cause flow reduction in hot or cold water. To clean inlets, turn off water supply firstly.
- * If you want to do the maintenance for the faucet, please follow the below process.


After maintenance, to reset the parts, and test the water effect.

The diagram shows a close-up of the faucet aerator. A label 'Clean' with an arrow points to the aerator tip, indicating the area to be cleaned.

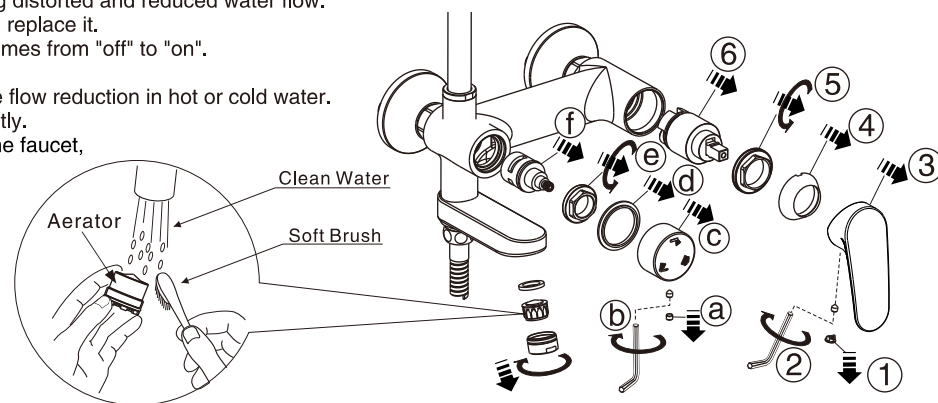

- 4 -

Simplica 3-way RS Kit (Powerjet /Drizzle)

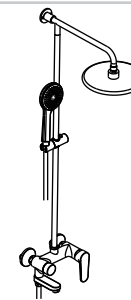

American Standard

Installation & Operation Instructions

* American Standard continually improves our product design and performance and reserves the right to modify the dimension and specification of our products accordingly without any prior notification.

* This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.

- * All instruction procedures must comply in strict accordance with applicable local plumbing and building codes.
- * Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.
- * Check installation the Dimension Drawing to ensure to install it correctly.

* Water pressure condition: 0.05MPa~0.75MPa (Recommended water pressure condition: 0.1MPa~0.5MPa)
 * Environment temperature: 1~55℃
 * Water temperature: 4℃ ~ 90℃ (Recommended to use the highest water temperature is 60℃)
 * Steam is not allowed to use
 * The cold and hot water pipes must not be reserved.

During installation of the faucet, Please grab the body. Do not grab handle only.

Adjustable Wrench



Level



Screwdriver



Tape Measure



Teflon Tap



Pen




Electric drill



Sinkers


Unit: mm

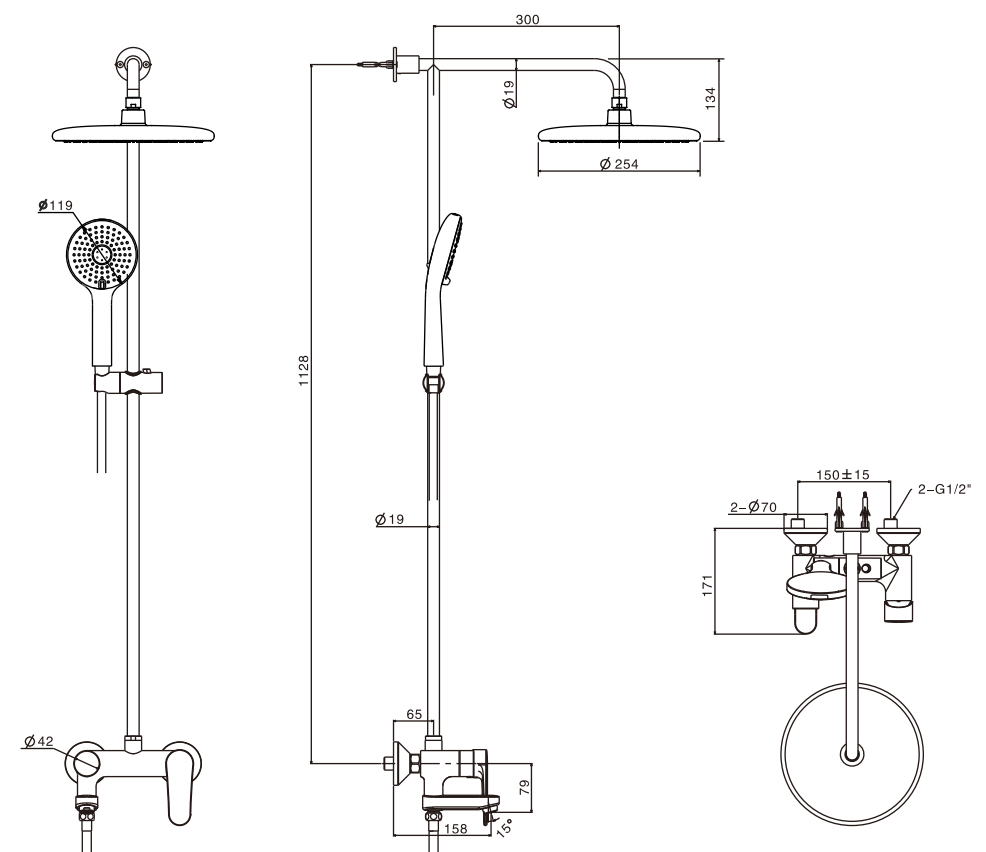

Rev. 4328109990/A0

- 1 -


Parts List

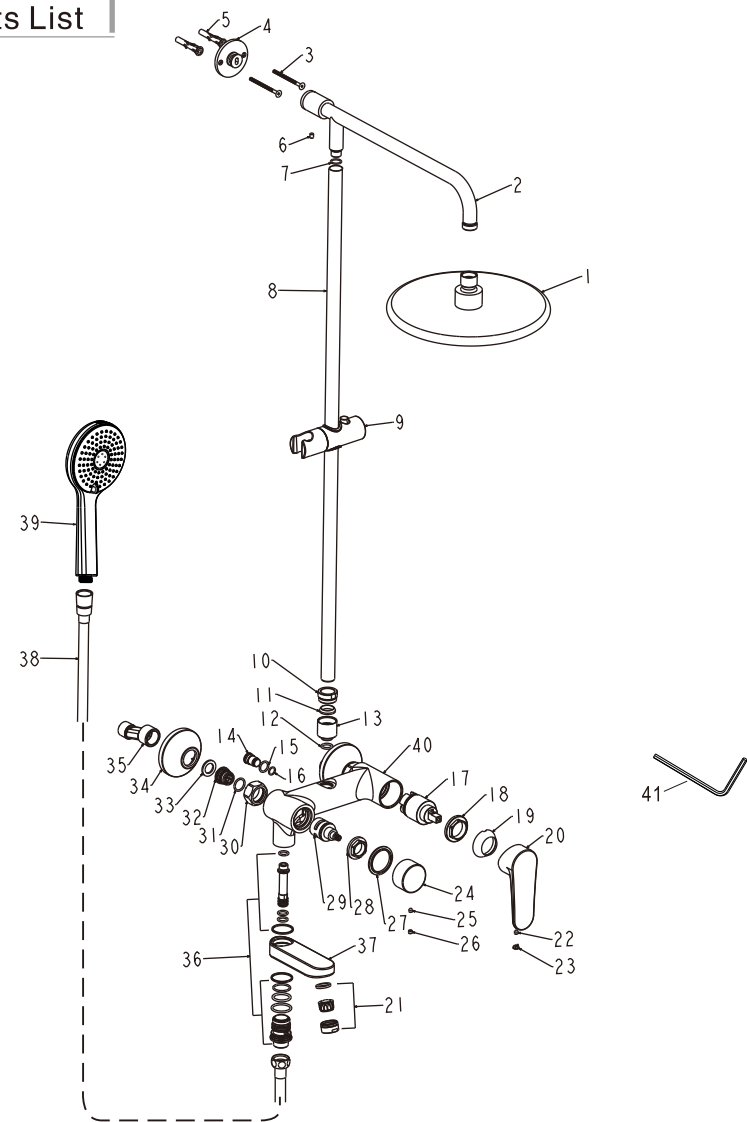


Parts List

No.	Part Name	Q'ty
1	Shower	1
2	Washer	1
3	Pipe	1
4	Bracket	1
5	Screw	2
6	Anchor	2
7	Screw	1
8	O-Ring	1
9	Pipe	1
10	Shower bracket	1
11	Nut	1
12	Washer	1
13	Connector	1
14	O-Ring	1
15	Index botton	1
16	O-Ring	1
17	Cartridge	1
18	Nut	1
19	Cap	1
20	Handle	1
21	Screw	1
22	Index botton	1
23	Diverter valve handle	1
24	Screw	1
25	Index botton	1
26	Washer	1
27	Nut	1
28	Diverter valve cartridge	1
29	O-Ring	2
30	Nut	2
31	Screw	2
32	Washer	2
33	Escutcheon	2
34	S-connector	2
35	Diverter Valve	1
36	Spout	1
37	Aerator	1
38	hose	1
39	Handshower	1
40	Body	1
41	Wrench	1

2 S-connector & Escutcheon Installation


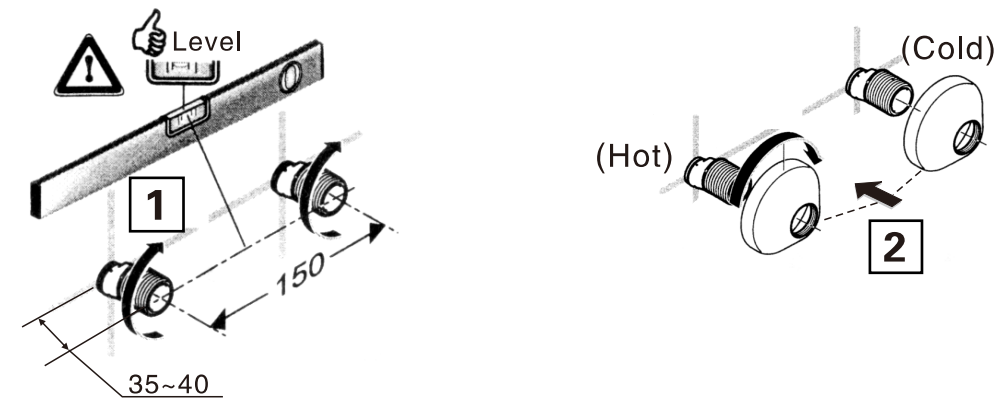


3 Rainshower kit & Faucet Assembly

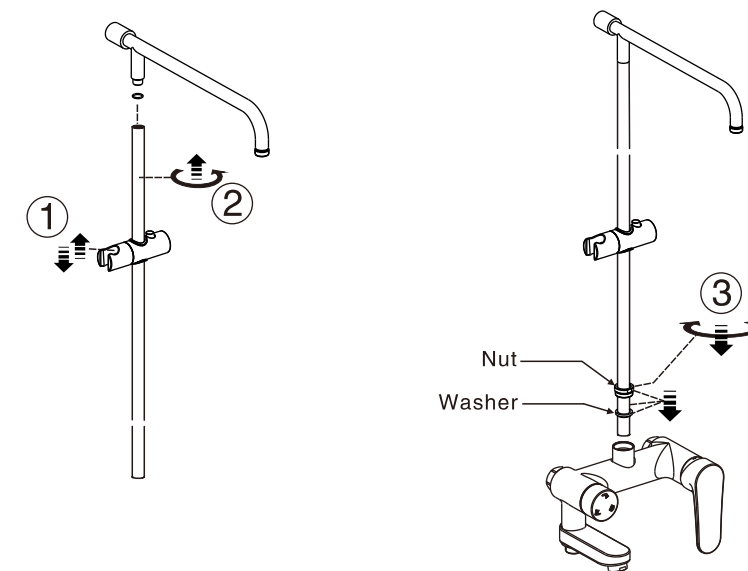

Installation

1 Preparation

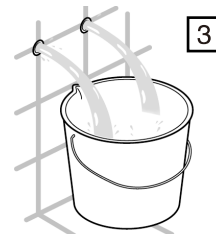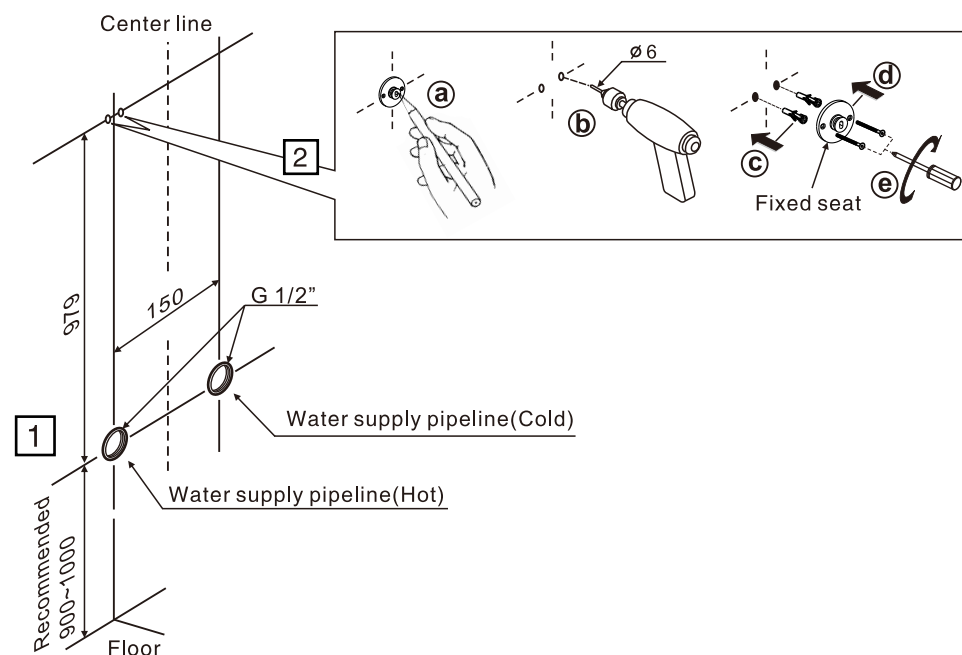

4 Rainshower kit & shower Installation

