


Test / Usage

1 Test

- * Press handle to "OFF" position. Open water supply valve to check all connections for leakage;
- * Press handle to "ON" position. Check the water flow.

2 Usage

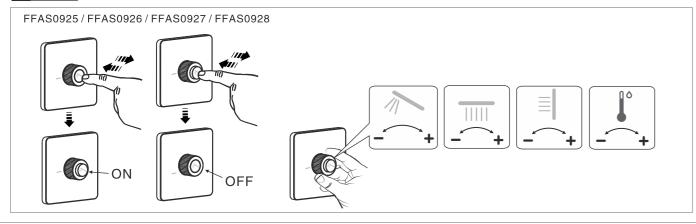


Trouble Shooting Guide

Trouble	Checkpoint	Contents	Action
Poor flow rate	Water supply valve	Check valve position.	Open it to full valve
Leakage	Cartridge packing	Check cartridge install.	When packing is damaged, replace the cartridge.
Deviant Temperature	Supply Valve	Check if the water from Supply valve is enough or not	Increase water supply
	Supply system	Check if the supply pipe connected correct or not	Connect the hot and cold water pipe correctly

- 4 -

Care & Maintenance


- * If you want to do the maintenance for the faucet, please follow the below process.
- * Before maintenance, please shut off the water supply system.

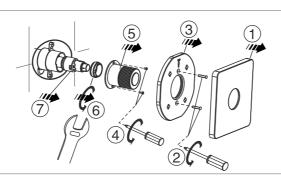



Attention: Please Leave the manual to the customer after installation is finished.

 FFAS0925-709XXXBF0 FFAS0925-709XXXBT0 EasySET for Hand Showe FFAS0926-709XXXBT0 FFAS0927-709XXXBF0 FFAS0927–709XXXBT0 EasySET for Body Shower FFAS0928-709XXXBF0 FFAS0928-709XXXBT0 EasySET for Pre-warming









XXX = AL0 / A00 / DA0 / GL0 / 440 / 500

FFAS0925-709XXXBF0 FFAS0926-709XXXBF0 FFAS0927-709XXXBF0 FFAS0928-709XXXBF0 FFAS0925-709XXXBT0 FFAS0926-709XXXBT0 FFAS0927-709XXXBT0 FFAS0928-709XXXBT0

Thank you for selecting American-Standard - the benchmark of high quality for over 100 years. To ensure the installation proceeds smoothly--please read these instructions carefully before you begin.

- * American Standard always keep raising and improving the product design and performance, and reserve the right to make changes in product characteristics, package, availability at any time without notice.
- * This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.


Pre-Installation Checks

- * All instruction procedures must strictly comply with local plumbing and building codes regulations.
- * Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.
- * Check installation distances in the Dimension diagram to ensure correct installation.

Conditions for use:

- * Recommended water pressure condition: (Dynamic Pressure): 0.1Mpa-0.5Mpa (When exceed 0.5MPa, it is strongly advised to odd pressure reducing valve)
- * Environment Temperature:1~55°C
- * Water temperature: 4°C ~ 90°C
- * The cold and hot water pipes must not be reserved. Steam is not allowed to use.



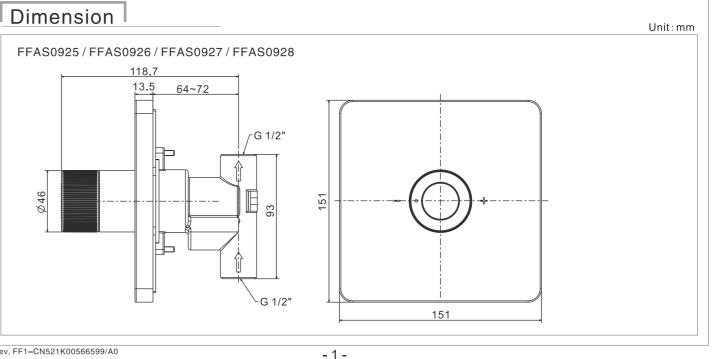

Rev. FF1-CN521K00566599/A0

