

# CLOSE COUPLE TOILET







Loven CC BTW

Installation manual

105819SH00, 105832SH00, 1089929990  
Back inlet




American Standard

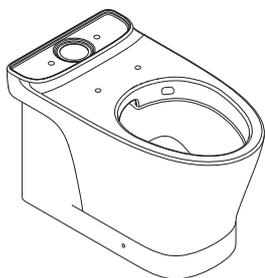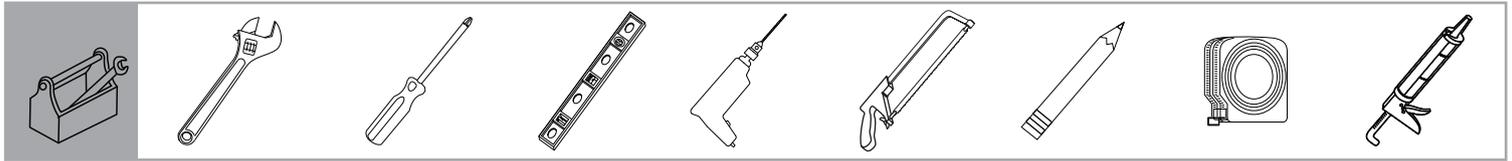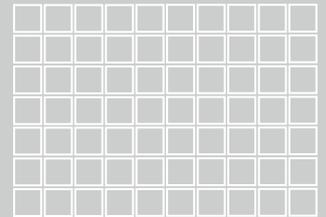

— x1



— x1

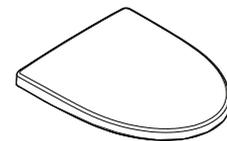

— x1



— x1



— x1



— x1



— x1





— x1



— x1






— x1

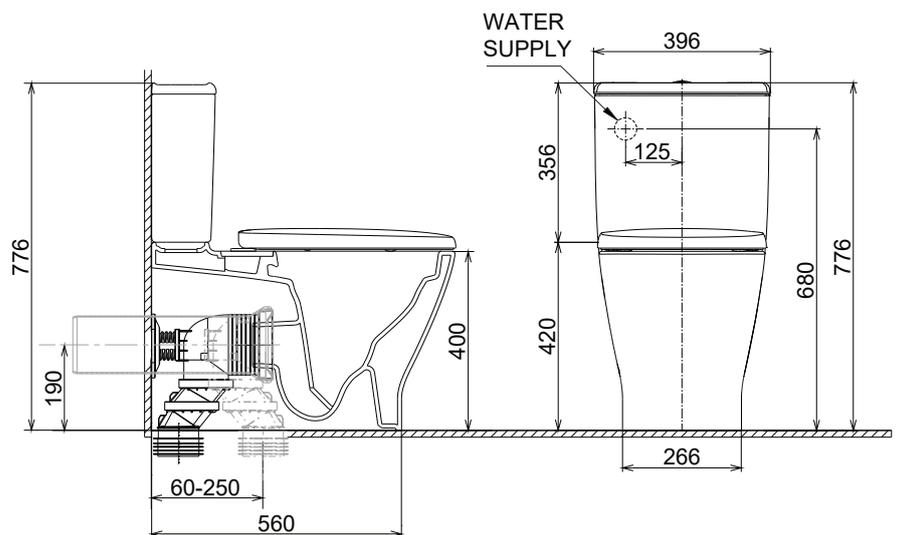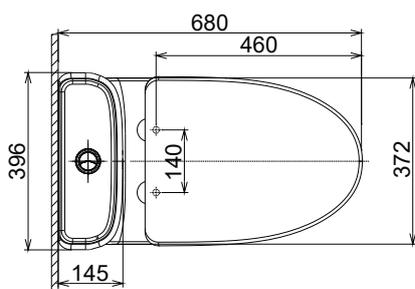




1

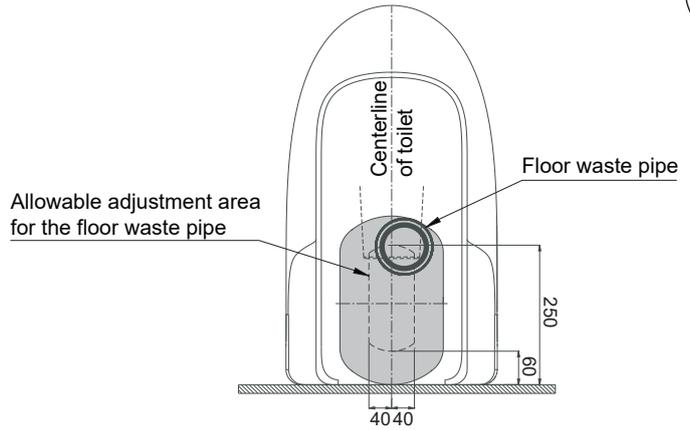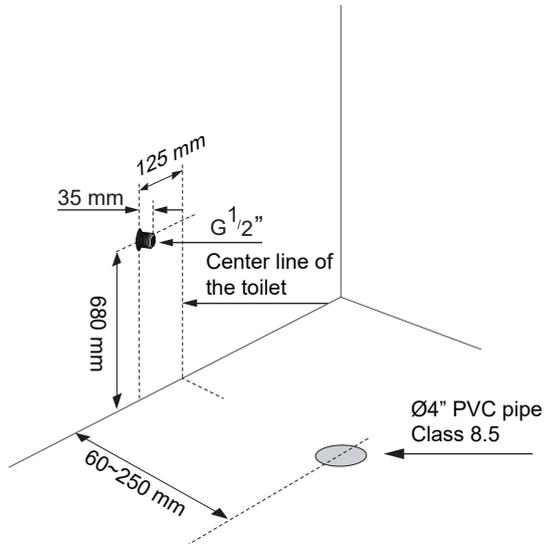

Set-out dimension



\* Choose one side of the pipe. Drain out water from pipe before install stop valve

2

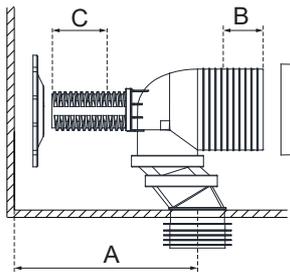


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)	THREAD CUTOUT (C)
60-160 mm	0 mm	103 mm
160-250 mm	90 mm	13 mm


3

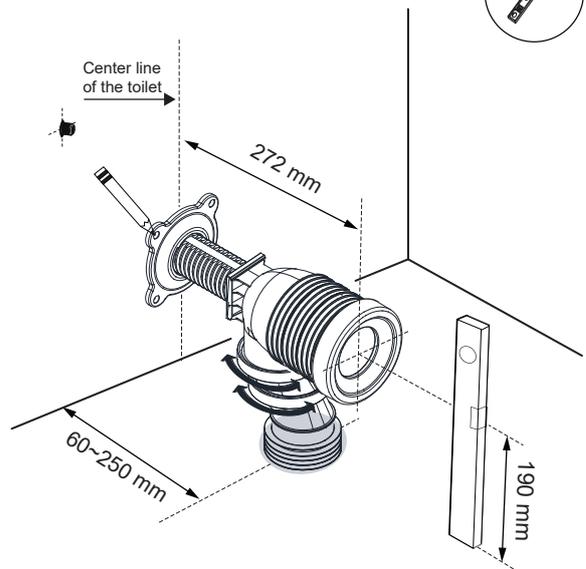

4


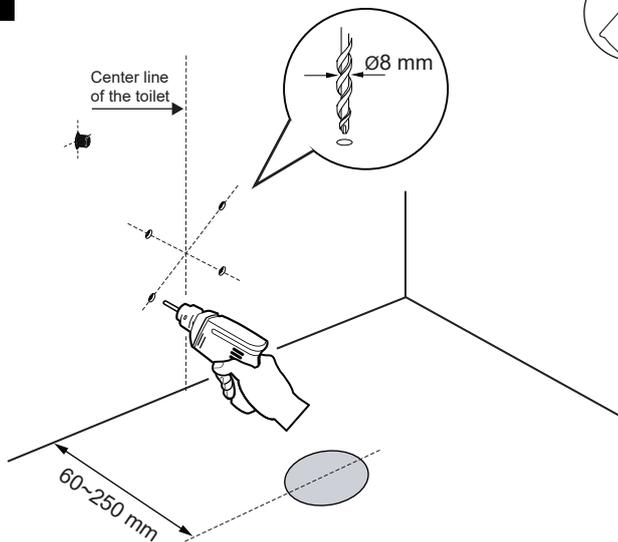


5

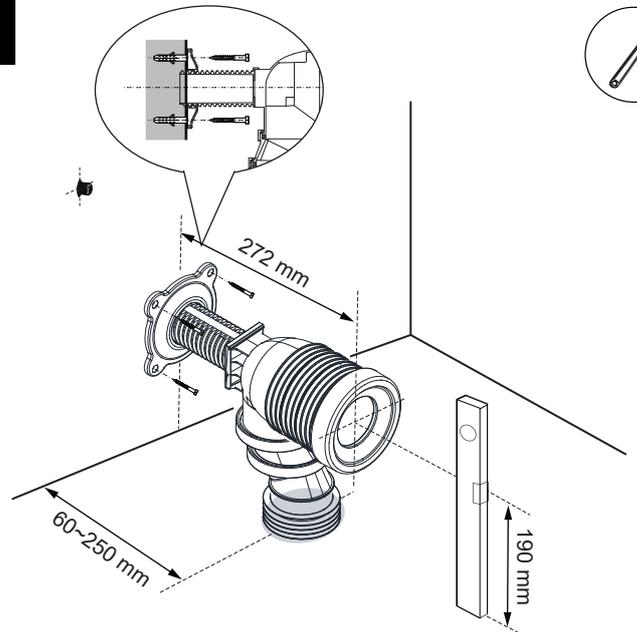




# P- Trap

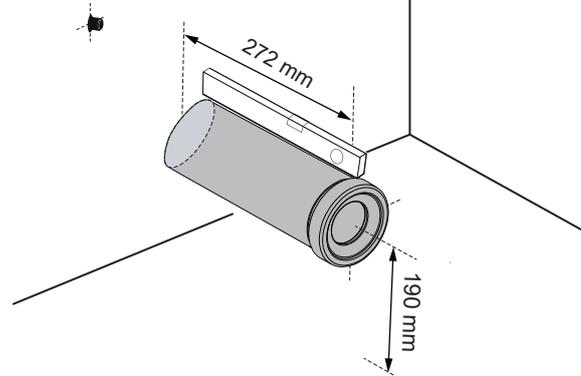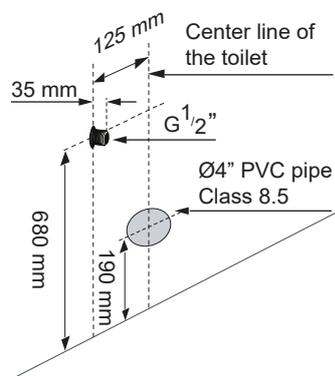


\* Choose one side of the pipe. Drain out water from pipe before install stop valve


6

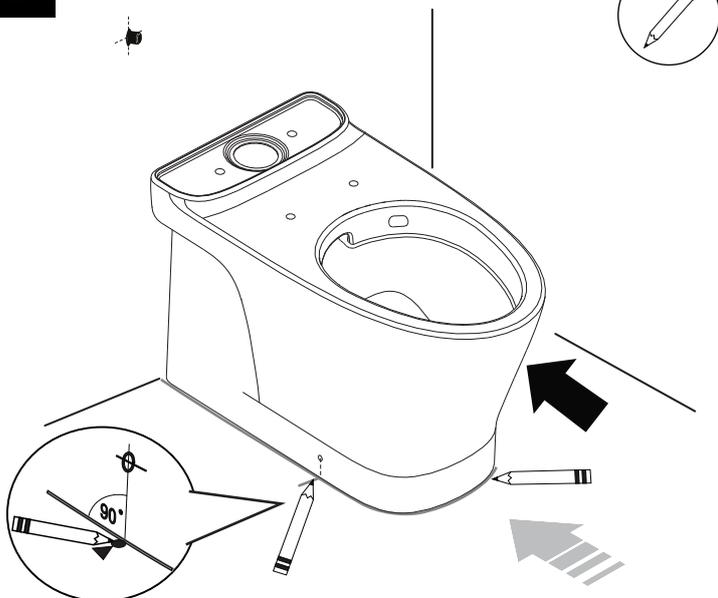


7

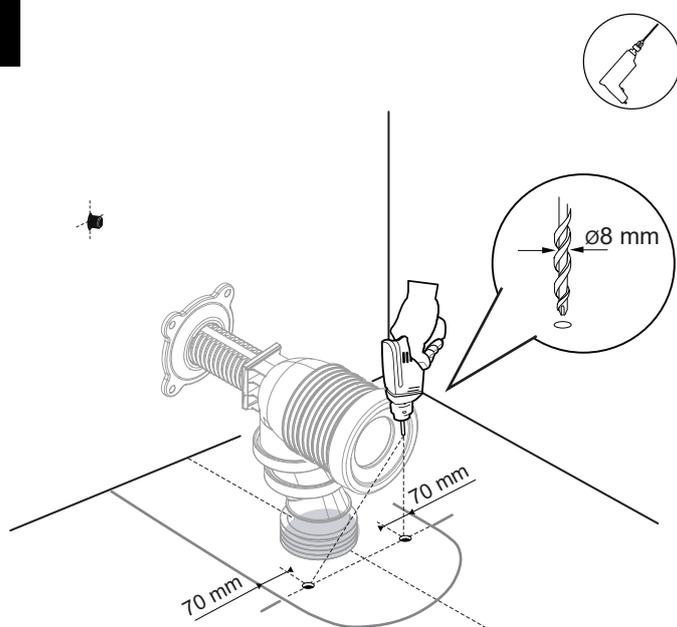

8

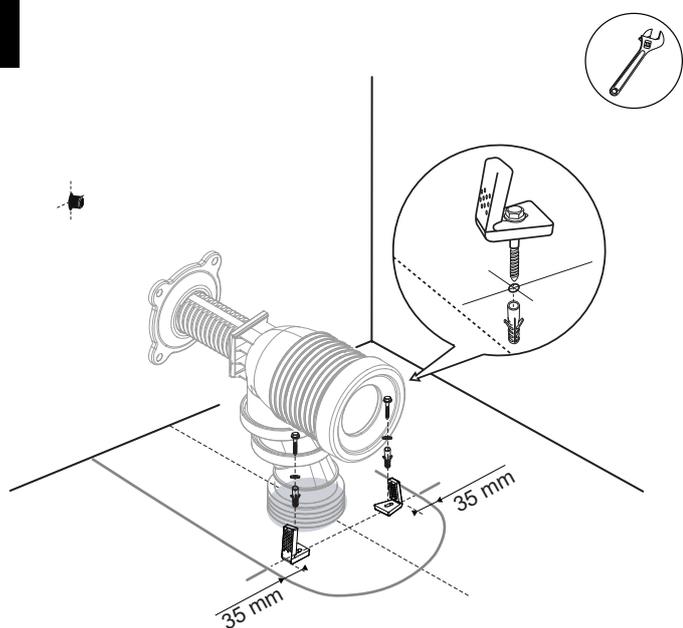


9

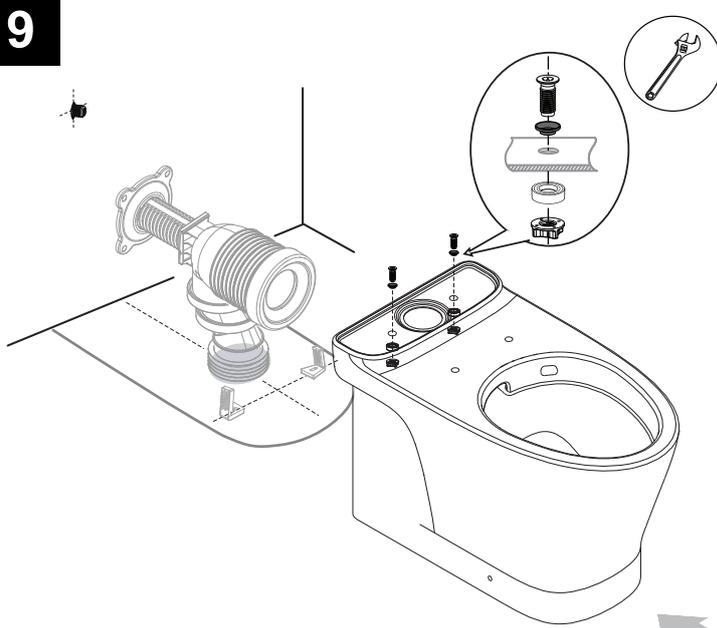





10

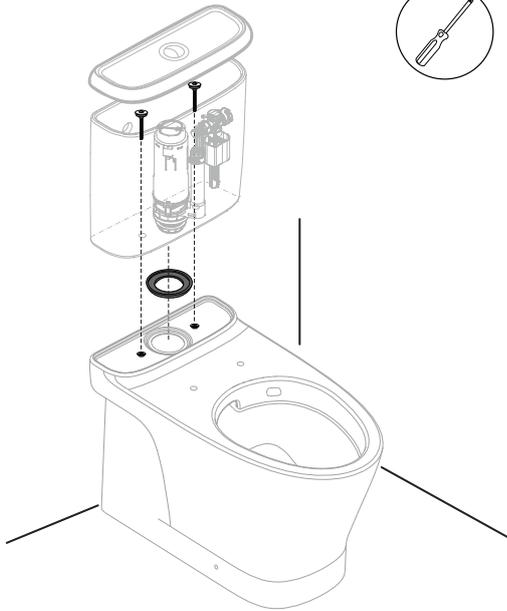


11

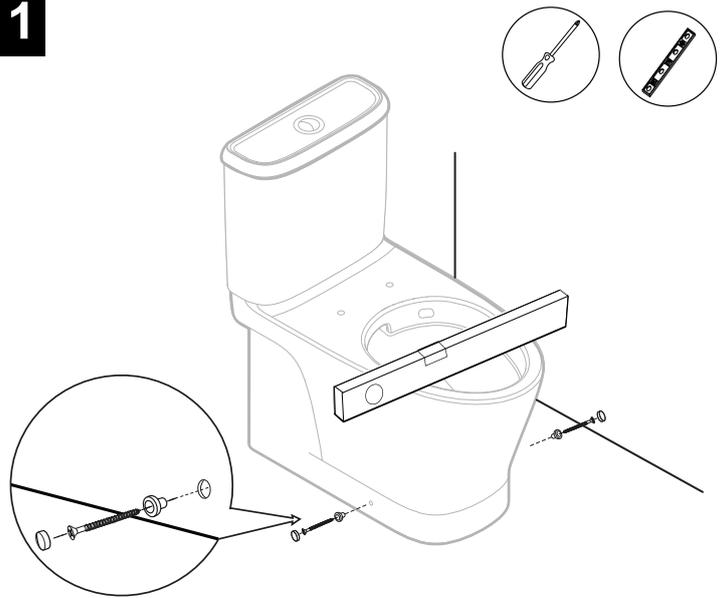

12

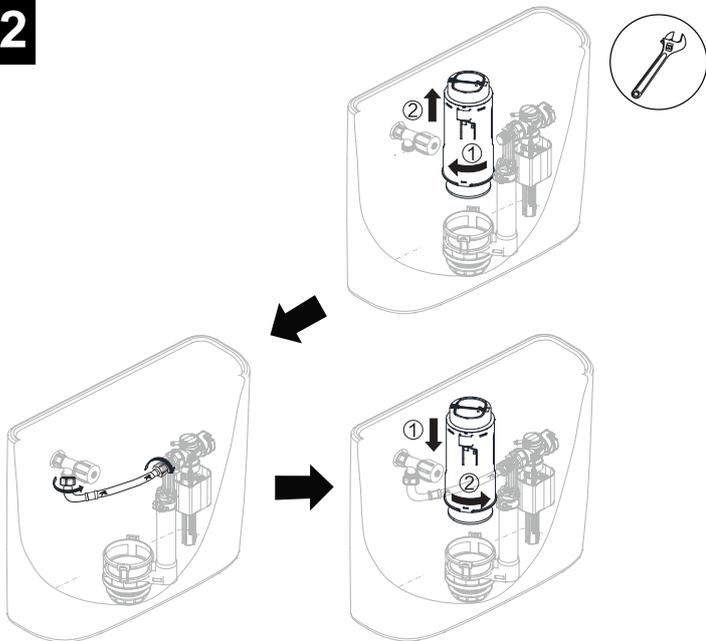

13

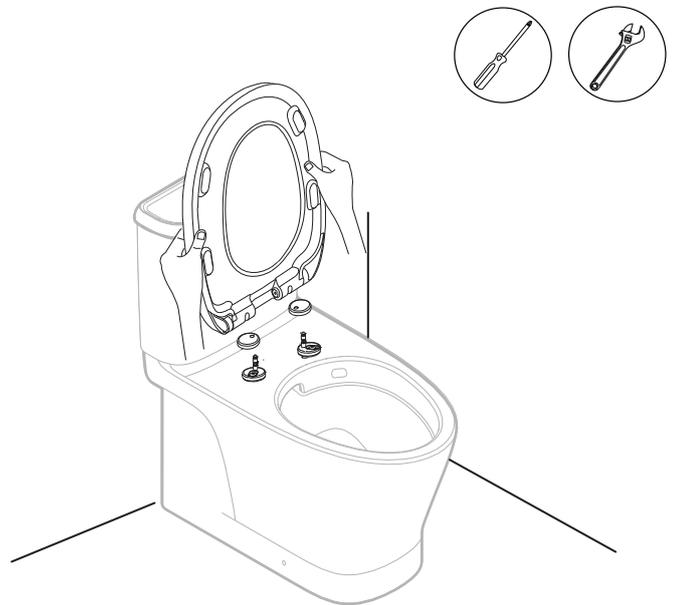

14



### IMPORTANT

#### Before turning on water supply check:

1. Cistern is installed properly
2. All moving components operate freely
3. All couplings are tightened correctly

#### Now fill cistern and recheck water level:

4. Check carefully for leaks
5. Test the cistern flushes

**Installation shall be in accordance with AS/NZS3500.1 and AS/NZS3500.2, as per Cl.4.3 of AS1172.1**